



International Patent Public No.:  
WO 2006/007772  
China Patent No.: ZL02220153.X,  
ZL200420078956.5  
US Patent No.: 7549446  
India Patent No.: 232582  
Russia Patent No.: 2349819  
South Korea Patent No.: 10-0914137  
Mexico Patent No.: 268581  
Australia Patent No.: 2005263257  
Philippine Patent No.: 1-2006-502553  
Taiwan Patent No.: M287896

## Multi-functional Flow Control Valve for Water Treatment Systems

63502, 63502B (Old Model No.: F65B1, F65G1)  
63602, 63602B (Old Model No.: F65B3, F65G3)  
73502, 73502B (Old Model No.: F69A1, F69G1)  
73602, 73602B (Old Model No.: F69A3, F69G3)

## Instruction Manual



Please read this manual in details  
before using this valve and keep it properly  
in order to consult in the future  
0WRX.466.507

Before the valve put into use, please fill in the below content so as to help us to refer in the future.

### The Program Type Setting (Operation by professional)

When all symbols light on, press and hold  and  buttons for 5 seconds to enter the menu of valve model selection. **Please set the program type in accordance with the product type.**(Time clock type by days or hours ,or Meter type); for example, F65B1 or F65G1 should be set to F65B1; F65B3 or F65G3 should be set to F65B3. You couldn't set to other type.)

### Softener System Configuration

Tank Size: Dia. \_\_\_\_\_ mm, Height \_\_\_\_\_ mm;  
 Resin Volume \_\_\_\_\_ L; Brine Tank Capacity \_\_\_\_\_ L;  
 Hardness of Raw Water \_\_\_\_\_ mmol/L; Pressure of Inlet Water \_\_\_\_\_ MPa;  
 Control Valve Model \_\_\_\_\_ ; Number \_\_\_\_\_ ;  
 The Specification of Drain Line Flow Control \_\_\_\_\_ ; Injector No. \_\_\_\_\_ .  
 Water Source: Ground-water ☐ ; Filtered Ground-water ☐ ;  
 Tap Water ☐ ; Other \_\_\_\_\_ .

### Parameter Set

| Parameter                                 | Unit           | Factory Default | Actual Value |
|-------------------------------------------|----------------|-----------------|--------------|
| Control Mode A-01 (02, 03, 04)            | /              | A-01            |              |
| Unit Mode HU01 (02, 03)                   | /              | HU01            |              |
| Water Treatment Capacity (Meter type)     | m <sup>3</sup> | 10.00           |              |
| Service Days (Time clock type, by days)   | D.             | 03              |              |
| Service Hours (Time clock type, by hours) | H.             | 20              |              |
| Regeneration Time                         | /              | 02 : 00         |              |
| Backwash Time                             | Min.           | 10 : 00         |              |
| Brine & Slow Rinse Time                   | Min.           | 60 : 00         |              |
| Brine Refill Time                         | Min.           | 05 : 00         |              |
| Fast Rinse Time                           | Min.           | 10 : 00         |              |
| Interval Regeneration Days                | D.             | 30              |              |
| Output Mode b-01 (02)                     | /              | b-01            |              |

● If there is no special requirement when product purchase, we choose 3# drain line flow control and 5# injector for the standard configuration.

## Catalogue

|                                                      |    |
|------------------------------------------------------|----|
| Notice.....                                          | 3  |
| 1. Product Overview.....                             | 4  |
| 1.1. Main Application & Applicability.....           | 4  |
| 1.2. Product Characteristics.....                    | 4  |
| 1.3. Service Condition.....                          | 7  |
| 1.4. Product Structure and Technical Parameters..... | 8  |
| 1.5. Installation.....                               | 9  |
| 2. Basic Setting & Usage.....                        | 12 |
| 2.1. The Function of PC Board.....                   | 12 |
| 2.2. Basic Setting & Usage.....                      | 14 |
| 3. Applications.....                                 | 18 |
| 3.1. Softener Flow Chart.....                        | 18 |
| 3.2. The Function and Connection of PC Board.....    | 20 |
| A.Signal Output Connector.....                       | 21 |
| B.Interlock.....                                     | 24 |
| C.Pressure Relief Output.....                        | 24 |
| D.Remote Handling Connector.....                     | 25 |
| E.Interlock System.....                              | 25 |
| F.Series System.....                                 | 25 |
| 3.3. System Configuration and Flow Rate Curve.....   | 26 |
| 3.4. Parameter Settlement.....                       | 28 |
| 3.5. Parameter Enquiry and Setting .....             | 29 |
| 3.6. Trial Running.....                              | 34 |
| 3.7. Trouble-Shooting.....                           | 36 |
| 3.8. Assembly & Parts.....                           | 39 |
| 4. Warranty Card.....                                | 49 |

## Notice

- To ensure normal operation of the valve, please consult with professional installation or repairing personnel before use it.
- If there are any of pipeline engineering and electric works, there must be finished by professional at the time of installation.
- Do not use the control valve with the water that is unsafe or unknown quality.
- Depending on the changing of working environment and water requirement, each parameter of softener should be adjusted accordingly.
- When the water treatment capacity is too low, please check the resin. If the reason is shortage of resin, please add; if the resin is turn to reddish brown or broken, please replace.
- Test water periodically to verify that system is performing satisfactorily.
- Sodium used in the water softening process should be considered as part your overall dietary salt intake. Contact doctor if you are on a low sodium diet.
- Ensure that there is solid salt all the time in the brine tank in the course of using, when this valve is used for softening. The brine tank should be added the clean water softening salts only, at least 99.5% pure, forbidding use the small salt.
- Do not put the valve near the hot resource, high humidity, corrosive, intense magnetic field or intense vibrations environment. And do not leave it outside.
- Forbidden to carry the injector body. Avoid using injector body as support to carry the system.
- Forbidden to use the brine tube or other connectors as support to carry the system.
- Please use this product under the water temperature between 5 ~ 50℃, water pressure 0.15 ~ 0.6MPa. Failure to use this product under such conditions voids the warranty.
- If the water pressure exceeds 0.6MPa, a pressure reducing valve must be installed before the water inlet. While, if the water pressure under 0.15MPa, a booster pump must be installed before the water inlet.
- It is suggested to install PPR pipe, corrugated pipe or UPVC pipe, instead of TTLSG pipe.
- Do not let children touch or play, because carelessness operations may cause the procedure changed.
- When the attached cables of this product and transformer are changed, they must be changed to the one that is from our factory.

# 1. Product Overview

## 1.1. Main Application & Applicability

Used for softening or demineralization water treatment systems

Be suitable for Residential softening system

Ion exchange equipment

Boiler softening water system

RO pretreatment softening system, etc.

## 1.2. Product Characteristics

### ➤ Simple structure and reliable sealing

It adopts hermetic head faces with high degree pottery and corrosion resistance for opening and closing. It combines with Service, Backwash, Brine & Slow Rinse, Brine Refill and Fast Rinse.

### ➤ No water pass the valve in regeneration in single tank type

### ➤ Manual function

Realize regeneration immediately by pushing “” at any time. .

### ➤ Long outage indicator

If outage overrides 3days, the time of day indicator “12: 12” will flash to remind people to reset new time of day. The other set parameters do not need to reset. The process will continue to work after power on.

### ➤ LED dynamic screen display

The stripe on dynamic screen flash, it indicates the control valve is in service, otherwise, it is in regeneration cycle.

### ➤ Buttons lock

No operations to buttons on the controller within 1 minute, button lock indicator light on which represent buttons are locked. Before operation press and hold the “” and “” buttons for 5 seconds to unlock. This function can avoid incorrect operations.

### ➤ Interval backwash times (Suitable for F69)

It could set up interval backwash times for F69 up-flow regeneration valve which means several times of services but one time of backwash. The setting of interval backwash time is depending on the local water turbidity. (The lower the turbidity is , the longer of the interval backwash times can be set)



➤ **It can choose time clock type or meter type by program selection**

When all symbols light on, press and hold  and  buttons for 5 seconds to enter the menu of valve model selection. Please set the program type in accordance with the product type. (Tim clock type by days or hours or meter type) (Notice: The meter type product has one flow meter and flow meter cable, but the time clock type doesn't have).

➤ **Four kinds of meter type can be selected ( Suite for F65B3, F65G3,F69A3,F69G3)**

| Model | Name                        | Instruction                                                                                                                                                    |
|-------|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A-01  | Meter Delayed               | Regenerate on the day although the available volume of treated water drops to zero (0). Regeneration starts at the regeneration time.                          |
| A-02  | Meter Immediate             | Regenerate immediately when the available volume of treated water drops to zero (0).                                                                           |
| A-03  | Intelligent Meter Delayed   | Meter Delayed Regeneration type, but by setting Resin Volume, Feed Water Hardness, Regeneration Factor, the controller will calculate the System Capacity.     |
| A-04  | Intelligent Meter Immediate | Meter Immediately Regeneration Type, but by setting Resin Volume, Feed Water Hardness, Regeneration Factor, the controller will calculate the System Capacity. |

➤ **There are two kinds of regeneration mode for time clock type**

When the program is set to time clock type by days (Such as F65B1, F69A1, etc.) it can be changed to be by hours by dialing the red switch on main control board to “1” (Refer to the figure in P20). Pointing to “ON” mean the time clock type service by days. (Attention: After dialing the switch, please restart the power)


➤ **Interlock function**

It has a function of interlock to realize only one valve in regeneration but the other valves are in service while several valves parallel in system. In multi-steps treatment systems such as RO pre-treatment, when several valves are in series, there is only one valve in regeneration or rinsing, ensuring to pass water all the times while different valves in regeneration or washing.(Application refer to Figure 3-9)

### ➤ Signal output

There is a signal output connector on main control board. It is for controlling external wiring( Refer to Figure, from Figure3-1 to Figure 3-8).

There are two kinds of output modes. b-01 Mode: Turn on start of regeneration and shut off end of regeneration; b-02 Mode: Signal available only intervals of regeneration cycles and in service.

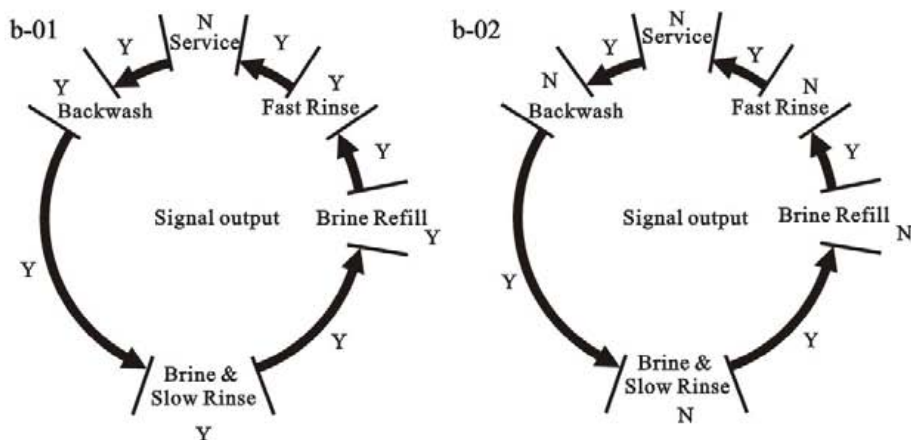

### ➤ Remote handling input

This connector can receive external signal, used together with PLC, and computer etc. to control the valve. (Application refer to Figure3-11)

### ➤ Pressure relief output

The valve will cut off feeding water to drain line when it switches in regeneration cycles (Same as signal output b-02). Thus in some water treatment system, e.g. Deep Well, one booster pump was installed on the inlet to increase the system water feeding pressure, this cut-off will cause pressure on inlet rising too fast to damage the valve. Pressure Relief Output can be used to avoid this problem. (Application refer to Figure3-10)

### ➤ Maximum interval regeneration days

Under the situation of service reaching the setting days and the volume not yet, it could enter into regeneration process forcibly when current time is the same as regeneration time.

### ➤ All parameters can be modified

According to the water quality and usage, the parameters in the process can be adjusted.

### 1.3. Service Condition

Runxin Valve should be used under the below conditions:

| Items               |                         | Requirement                                                                   |
|---------------------|-------------------------|-------------------------------------------------------------------------------|
| Working conditions  | Water pressure          | 0.15MPa ~ 0.6MPa                                                              |
|                     | Water temperature       | 5℃ ~ 50℃                                                                      |
| Working environment | Environment temperature | 5℃ ~ 50℃                                                                      |
|                     | Relative humidity       | ≤95% ( 25℃ )                                                                  |
|                     | Electrical facility     | AC100 ~ 240V/50 ~ 60Hz                                                        |
| Inlet water quality | Water turbidity         | Down-flow regeneration <5FTU;<br>Up-flow regeneration <2FTU                   |
|                     | Water hardness          | First Grade $\text{Na}^+$ <6.5mmol/L;<br>Second Grade $\text{Na}^+$ <10mmol/L |
|                     | Free chlorine           | <0.1mg/L                                                                      |
|                     | Iron <sup>2+</sup>      | <0.3mg/L                                                                      |
|                     | CODMn                   | <2mg/L ( $\text{O}_2$ )                                                       |

In the above table, First Grade  $\text{Na}^+$  represents First Grade  $\text{Na}^+$  Exchanger. Second Grade  $\text{Na}^+$  represents Second Grade  $\text{Na}^+$  Exchanger.


● When the water turbidity exceeds the conditions, a filter should be installed on the inlet of control valve.

● When the water hardness exceeds the conditions, the outlet water hardness will hardly reach the requirement of boiler feed water ( 0.03 mmol/L ) . It is suggested to adopt second grade softener.



## 1.4. Product Structure and Technical Parameters

Product dimension

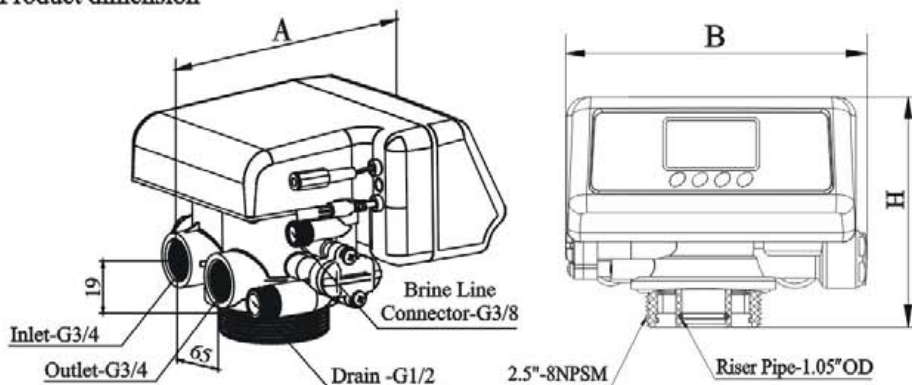

| Model       | A(mm)<br>max | B(mm)<br>max | H(mm)<br>max | Flow Rate<br>m <sup>3</sup> /h<br>@0.3MPa | Regeneration<br>Mode |
|-------------|--------------|--------------|--------------|-------------------------------------------|----------------------|
| F65B3/F65B1 | 187.3        | 187.8        | 142.8        | 2.0                                       | Down-flow            |
| F69A3/F69A1 | 196.4        | 187.8        | 152.8        | 2.0                                       | Up-flow              |
| F65G3/F65G1 | 179.8        | 207.8        | 167.8        | 2.0                                       | Down-flow            |
| F69G3/F69G1 | 179.8        | 207.8        | 167.8        | 2.0                                       | Up-flow              |

### Attention:

1. The appearance is just for reference. It is subjected to the real product.
2. OD—Outer Diameter, 1.05OD=26.7mm
3. Transformer Output: DC12V/1.5A

## 1.5. Installation

### A. Installation notice

Before installation, read all those instructions completely. Then obtain all materials and tools needed for installation.

The installation of product, pipes and circuits, should be accomplished by professional to ensure the product can operate normally.

Perform installation according to the relative pipeline regulations and the specification of Water Inlet, Water Outlet, Drain Outlet, Brine Line Connector.

### B. Device location

- ① The filter or softener should be located close to drain.
- ② Ensure the unit is installed in enough space for operating and maintenance.
- ③ Brine tank need to be close to softener.
- ④ The unit should be kept away the heater, and not be exposed outdoor. Sunshine or rain will cause the system damage.
- ⑤ Please avoid to install the system in the Acid/Alkaline, Magnetic or strong vibration circumstance, because above factors will cause the system disorder.
- ⑥ Do not install the filter or softener, drain pipeline in circumstance which temperature may drop below 5°C, or above 50°C.
- ⑦ One place is recommended to install the system which causes the minimum loss in case of water leaking.

### C. Pipeline installation

#### ① Install control valve

a. As the Figure 1-1 shows, select the riser pipe with 26.7mm OD, glue the riser pipe to the bottom strainer and put it into the mineral tank, cut off the exceeding tube out of tank top opening. Plug the riser tube in case of mineral entering.

b. Fill the mineral to the tank, and the height is accordance with the design code.

c. Remove the tap covering on the central tube and check if the riser tube is on the central of tank.

d. Install the top distributor to the valve and insert the riser tube into control valve and screw tight control valve.

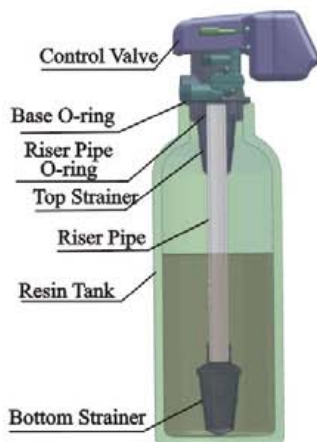


Figure1-1

**Note:**

- The length of riser tube should be neither higher 2mm nor lower 5mm tank top opening height, and its top end should be rounded to avoid damage of O-ring inside the valve.
- Avoid floccules substance together with resin to fill in the mineral tank
- Avoid O-ring inside control valve falling out while rotating it on the tank.

**② Install animated connector**

As Figure1-2 shows, put the sealing ring into nut of animated connector, and screw in water inlet.

**③ Install flow meter**

As Figure1-2 shows, put the sealing ring into nut of flow meter, screw in water outlet, insert the probe wire into flow meter.

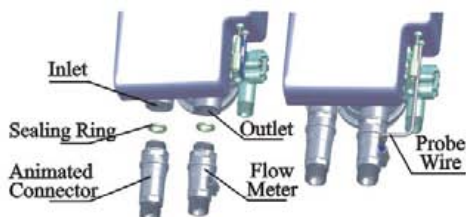


Figure1-2

**④ Pipeline connection**

- a. As Figure1-3 shows, install a pressure gauge in water inlet.
- b. Install valve A,B,C and D in the intermediate pipeline, inlet and outlet. Valve D is a sampling valve (Or adopt F70B bypass valve).
- c. Install a check valve in water outlet.
- d. Inlet pipeline should be in parallel with outlet pipeline. Support inlet and outlet pipeline with fixed holder.

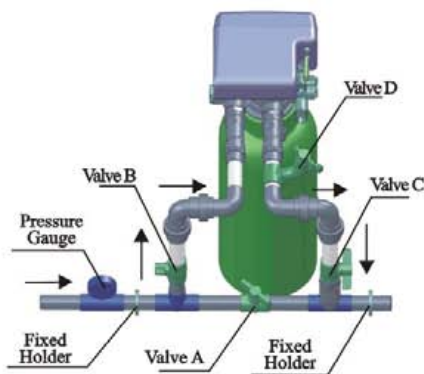


Figure1-3

**Note:**

- If the water outlet or water tank is installed higher than control valve or parallel interlock system with multi-outlets, a liquid level controller must be installed in brine tank. Or else, the water in water outlet or water tank will flow backwards into brine tank when backwash.
- If making a soldered copper installation do all sweat soldering before connecting pipes to the valve. Torch heat will damage plastic parts.
- When turning threaded pipe fittings onto plastic fitting, use care not to cross thread or broken valve.
- If the valve belongs to time clock type, there are no step ② and ③.

### ⑤ Install drain pipeline

- As the Figure 1-4 shows, slide the drain hose connector into drain outlet.
- Insert drain line flow control into drain outlet
- Screw drain hose connector into drain outlet, and lock it.
- Locate the drain hose well as the Figure1-4 show.

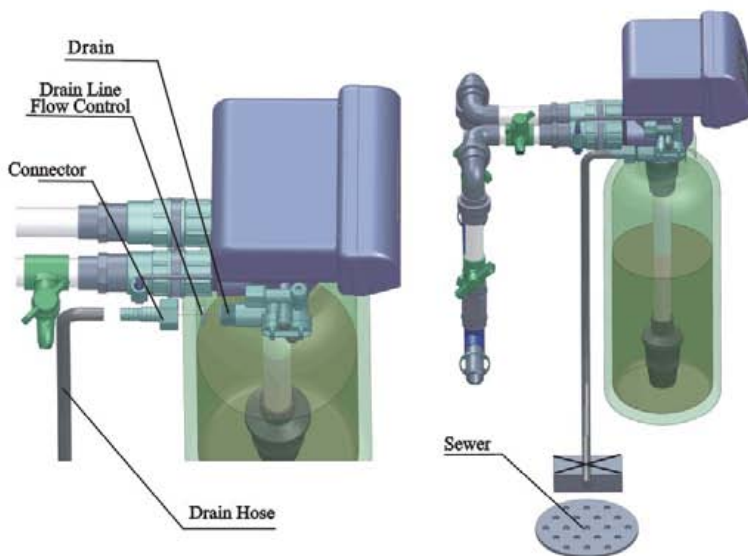


Figure1-4

#### Note:

- Control valve should be higher than drain outlet, and be better not far from the drain hose.
- Be sure not connect drain with sewer, and leave a certain space between them, avoid wastewater be absorbing to the water treatment equipment, such as showed in the Figure1-4.

## ⑥ Connect brine tube

- As Figure1-5 shows, slide 3/8" brine tube hose connector over end of brine tube.
- Insert tube bushing into the end of brine tube.
- Insert the red brine line flow control into valve brine line connector(Attention: cone side of control should face into valve)
- Tighten brine draw hose connector onto brine line connector.
- Connect the other end of brine tube with the brine tank. (The liquid level controller and air-blocker should be installed in the brine tank.)

### Remark:

The brine tube and drain pipeline should not be bended or plugged.


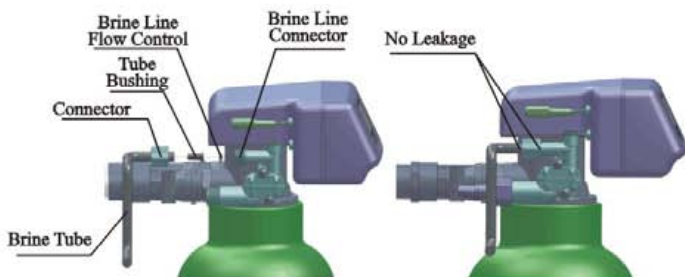


Figure1-5

## 2. Basic Setting & Usage

### 2.1. The Function of PC Board



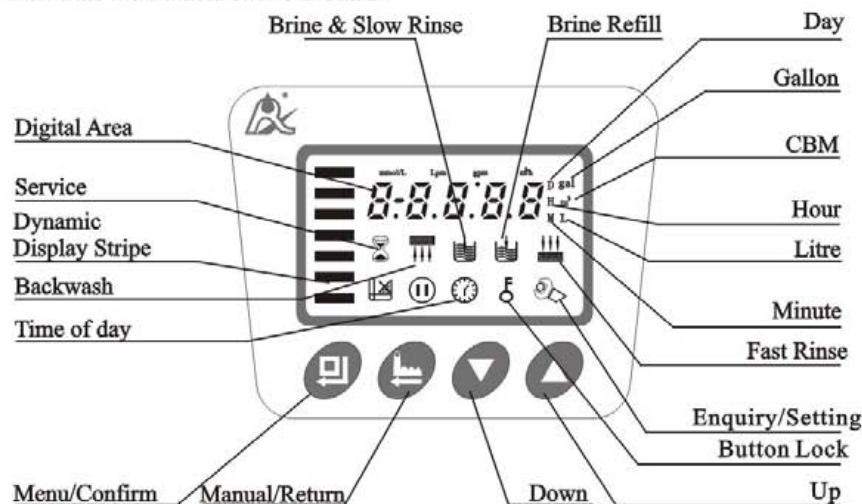

- A. Time of day indicator
- Light on, display the time of day.
  - “12: 12” flash, remind you to reset the time of day if electrical service interrupted 3 days more (If electrical service interrupted within 3 days, it doesn't need to reset the time.)
- B. Button lock indicator
- Light on, indicate the buttons are locked. At this moment, press any single button will not work (No operation in one minute, will light on and lock the buttons.)
  - Solution: Press and hold both and for 5 seconds until the light off.
- C. Program mode indicator
- Light on, enter program display mode. Use or to view all values.
  - Flash and enter program set mode. Press or to adjust values.
- D. Menu/Confirm button
- Press , light on, enter program display mode and use or to view all values.
  - In program display mode, press , flashes, enter program set mode, press or and adjust values.
  - Press after all program are set, and then the voice “Di ” means all setting are success and return program display mode.
- E. Manual/Return button
- Press in any status, it can proceed to next step. (Example: Press in Service status, it will start regeneration cycles instantly; Press while it is in Backwash status, it will end backwash and go to Brine & Slow Rinse at once.)
  - Press in program display mode, and it will return in Service. Press in program set mode, and it will return program display mode.
  - Press while adjusting the value, then it will return program display mode directly without saving value.
- F. Down and Up
- In program display mode, press or to view all values.
  - In program set mode, press or to adjust values.
  - Press and hold both and for 5 seconds to lift the Button Lock status.

## 2.2. Basic Setting & Usage

### A. Parameter specification

| Function                | Indicator                                                                           | Factory Default | Parameter Set Range | Instruction                                                                                                                                                                                    |
|-------------------------|-------------------------------------------------------------------------------------|-----------------|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Time of Day             |    | Random          | 00: 00~23:59        | Set the time of day when use, “: ” flash                                                                                                                                                       |
| Control Mode            | A-01                                                                                | A-01            | A-01                | Meter Delayed:<br>Regenerate on the day although the available volume of treated water drops to zero (0).<br>Regeneration starts at the regeneration time.                                     |
|                         |                                                                                     |                 | A-02                | Meter Immediate:<br>Regenerate immediately when the available volume of treated water drops to zero (0).                                                                                       |
|                         |                                                                                     |                 | A-03                | Intelligent Meter Delayed:<br>Meter Delayed Regeneration type, but by setting Resin Volume, Feed Water Hardness, Regeneration Factor, the controller will calculate the System Capacity.       |
|                         |                                                                                     |                 | A-04                | Intelligent Meter Immediate:<br>Meter Immediately Regeneration Type, but by setting Resin Volume, Feed Water Hardness, Regeneration Factor, the controller will calculate the System Capacity. |
| Unit Mode               | HU-01                                                                               | HU-01           | 01, 02, 03          | 01-m <sup>3</sup> ; 02-gal; 03-L                                                                                                                                                               |
| Service Days            |  | 1-03D           | 0~99Days            | Only for Time Clock Type, regeneration by days                                                                                                                                                 |
| Service Hours           |  | 1-20H           | 0~99 Hours          | Only for Time Clock Type, regeneration by hours                                                                                                                                                |
| Regeneration Time       | 02:00                                                                               | 02:00           | 00: 00 ~ 23:59      | Regeneration time; “: ” light on                                                                                                                                                               |
| Interval Backwash Times | F-00                                                                                | 00              | 0 ~ 20              | Interval backwash times. For example, F-01:indicate service 2 times, backwash 1 time                                                                                                           |
| Resin Volume            | 20L                                                                                 | 20L             | 5 ~ 500L            | Resin volume in resin tank (L)                                                                                                                                                                 |

|                                    |                                                                                   |        |             |                                                                                                                                                                                                                                                  |
|------------------------------------|-----------------------------------------------------------------------------------|--------|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Feed Water Hardness                | Yd1.2                                                                             | 1.2    | 0.1 ~ 9.9   | Feed water hardness (mmol/L)                                                                                                                                                                                                                     |
| Exchange Factor                    | AL.65                                                                             | 0.65   | 0.30 ~ 0.99 | Relate to the raw water hardness. When hardness is higher, the factor is smaller.                                                                                                                                                                |
| Water Treatment Capacity           |  | 10m³   | 0 ~ 99.99m³ | Water treatment capacity in one circle (m³)                                                                                                                                                                                                      |
| Backwash Time                      |  | 10min. | 0 ~ 99:59   | Backwash time(Minute)                                                                                                                                                                                                                            |
| Brine & Slow Rinse Time            |  | 60min. | 0 ~ 99:59   | Brine & Slow rinse time(Minute)                                                                                                                                                                                                                  |
| Brine Refill Time                  |  | 5min.  | 0 ~ 99:59   | Brine refill time(Minute)                                                                                                                                                                                                                        |
| Fast Rinse Time                    |  | 10min. | 0 ~ 99:59   | Fast rinse time(Minute)                                                                                                                                                                                                                          |
| Maximum Interval Regeneration Days | H-30                                                                              | 30     | 0 ~ 40      | Regenerate on the day even through the available volume of treated water does not drop to zero (0).                                                                                                                                              |
| Output Control Mode                | b-01                                                                              | 01     | 01 or 02    | Mode 01: Signal turn on start of regeneration and shut off end of regeneration.<br>(Connection refer to the Figure P6)<br>Mode 02: Signal available only intervals of regeneration cycles and in service.<br>(Connection refer to the Figure P6) |

## B. Process Display



Figure A

 


Figure B



Figure C

 


Figure D



Figure E



Figure F

 


Figure G

 


Figure H

### Illustration:

- In Service status, the figure shows A/B/C/D; In Backwash status, it shows figure E/C; In Brine& Slow Rinse status, it shows F/C; In Brine Refill status, it shows figure G/C; In Fast Rinse status, it shows figure H/C. In each status, every figure shows 15 seconds.
- Above displays are taking the Meter Type for example. For the Time Clock Type, it shows the rest days or hours, such as 1-03D or 1-10H.
- The display screen will only show “-00-” when the electrical motor is running.
- The time of day figure “⌚” flashes continuously, such as “12:12” flashes, indicates long outage of power. It reminds to reset the time of day.
- The display will show the error code, such as “-E1-” when the system is in error.
- Working process: Service→Backwash→Brine & Slow Rinse→Brine Refill→Fast Rinse→Service.

### C. Usage

After being accomplished installation, parameter setting and trail running, the valve could be put into use. In order to ensure the quality of outlet water can reach the requirement, the user should complete the below works:

- ① Ensure that there is solid salt all the time in the brine tank in the course of using when this valve is used for softening. The brine tank should be added the clean water softening salts only, at least 99.5% pure, forbidding use the small salt and iodized salt.
- ② Test the outlet water and raw water hardness at regular time. When the outlet water hardness is unqualified, please press the  and the valve will temporary regenerate again ( It will not affect the original set operation cycle)
- ③ When the feed water hardness change a lot, you can adjust the water treatment capacity as follow:

Press and hold both  and  for 5 seconds to lift the lock status. Press , and the  light on, then press , the digital area show the control mode. If it shows A-01or A-02, press  three times, and the digital area will show the given water treatment capacity( If the control mode shows A-03 or A-04, then press  four times, the digital area will show the feed water hardness); Press  again,  and digital flash. Press  or  continuously, reset the capacity value (Or water hardness). Press  and hear a sound “Di” then finish the adjustment. Press  exit and turn back the service status.

The estimation of water treatment capacity, you can refer to the professional application specification. When select A-03 or A-04 intelligent control mode, the control will automatically calculate the water treatment capacity by setting resin volume, feed water hardness and regeneration factor.


④ For A-01 or A-03 control mode (Delayed regeneration type), please pay attention to whether the time is current or not. If the time is not right, you can adjust as follow: After lifting the lock status, press , the  and “” light on. Then press , the  and hour value flash. Press  or  continuously, reset the hour value; Press  again,  and minute value flash. Press  or  continuously, reset the minute value; Press  and hear a sound “Di”, then finish the adjustment. Press  exit and turn back the service status.

The regeneration parameters have been set when control valve left factory. Generally, it does not need to reset. If you want enquiry and modify the setting, you can refer to the professional application specification.



## 3. Applications

### 3.1. Softener Flow Chart

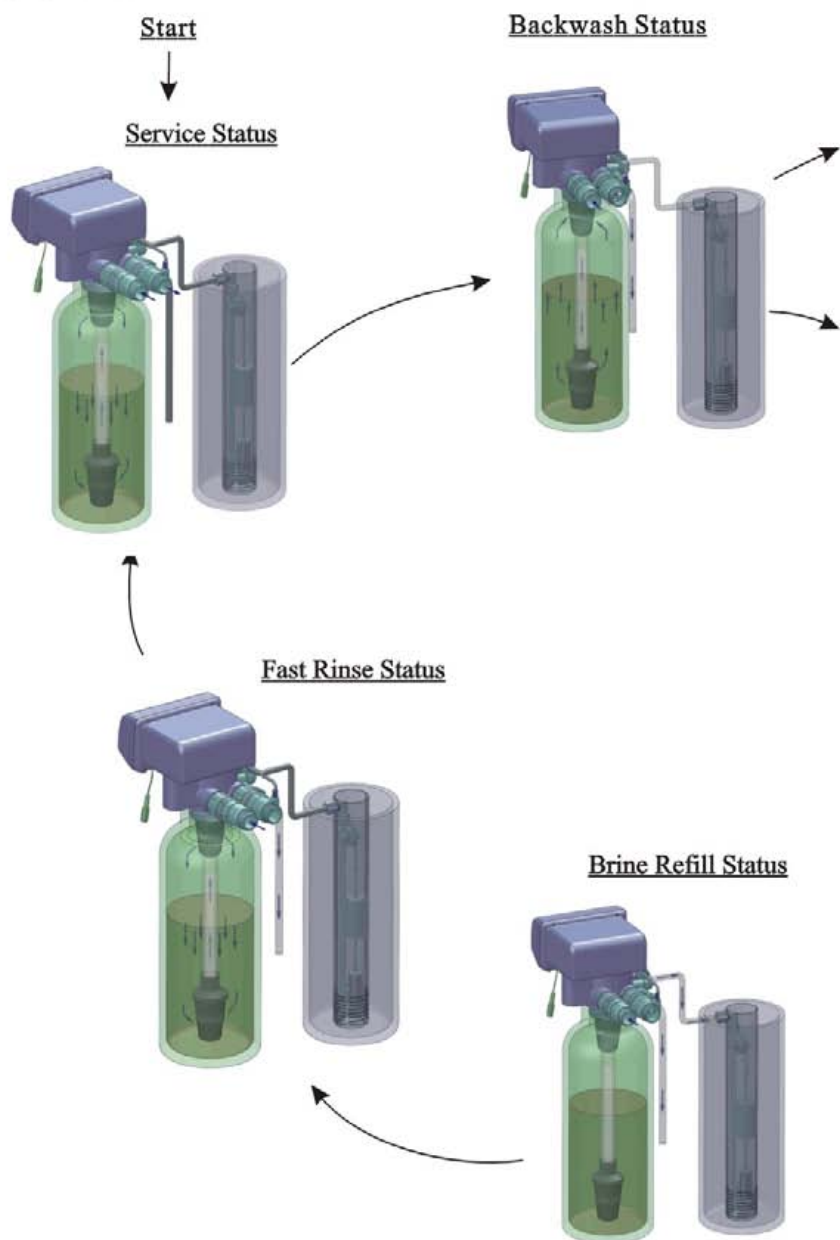

Up-flow Regeneration

Brine Draw Status



Slow Rinse  
Status



Down-flow Regeneration

Brine Draw Status




Slow Rinse  
Status



### 3.2. The Function and Connection of PC Board

Open the front cover of control valve, you will see the main control board and connection port as below:

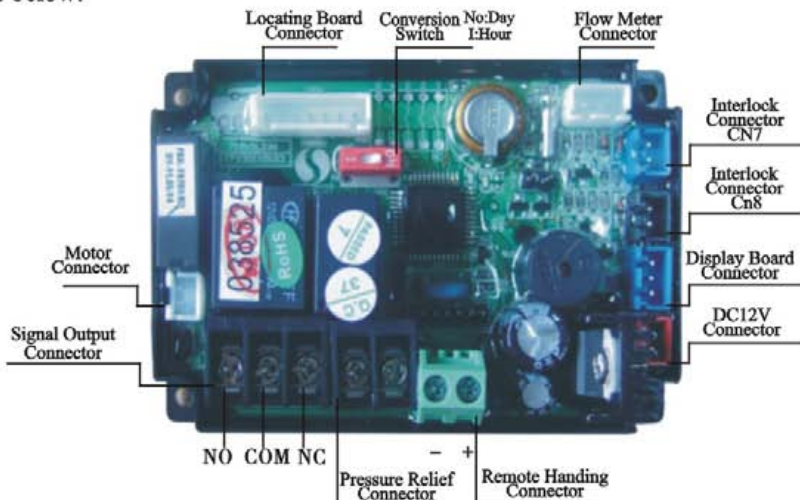

The main functions on main control board:


| Function                     | Application                                                         | Explanation                                                                                                                            |
|------------------------------|---------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Signal output connector b-01 | Outlet solenoid valve                                               | If system strictly require no hard water flow from outlet or controlling the liquid level in water tank.                               |
|                              | Inlet pump                                                          | Increase pressure for regeneration or washing. Use the liquid level controller to control inlet pump to ensure there is water in tank. |
| Signal output connector b-02 | Inlet solenoid valve or inlet pump                                  | When inlet pressure is high, it needs to close water inlet when valve is rotating to protect motor.                                    |
| Pressure relief connector    | Control the inlet bypass to release pressure                        | When valve is rotating, pressure relief connector opened to prevent pressure increasing rapidly.                                       |
| Interlock connector          | To ensure only one control valve regeneration or washing in system. | Use in RO Pre-treatment, water supply together but regeneration in turn. Second grade ion exchange equipment, etc.                     |
| Remote handling connector    | Receipt signal to make the control valve rotate to next circle      | It is used for on-line inspection system, PC connection, and realize automatically or remote controlling valve.                        |

### A. Signal Output Connector

1) Control Solenoid Valve (Set b-01)

①Solenoid Valve on Outlet Controls Water Level in Brine Tank.

**Instruction:** If system strictly require no hard water flow from outlet in regeneration cycle( Mainly for no hard water flow out when valve is switching or valve in backwash or brine drawing positions), a solenoid valve could be installed on outlet, the wiring refer to Figure 3-1.

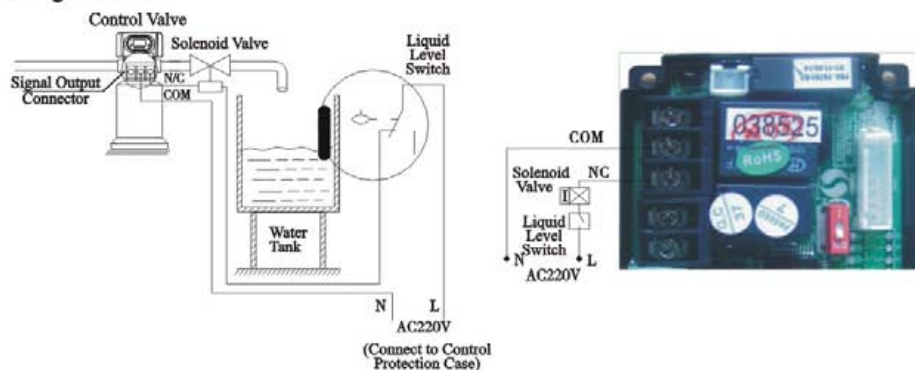

### Figure 3-1 Wring of Solenoid Valve on Outlet

Function:

When valve in service status, if soft water tank is short of water, solenoid valve is open to supply soft water, but if water tank has enough water, solenoid valve is closed, so no soft water supplied.

When the valve is in backwash status, there is no signal output. So, solenoid valve is closed, and no water flow into soft water tank.

②Solenoid Valve on Inlet (Set b-02)

**Instruction:** When inlet pressure exceeds 0.6MPa, install a solenoid valve on inlet. Control mode is b-02. Pressure relieved when valve switching, the wiring refer to Figure 3-2. As Figure 3-3 shows, it also can use the pressure relief port to work.

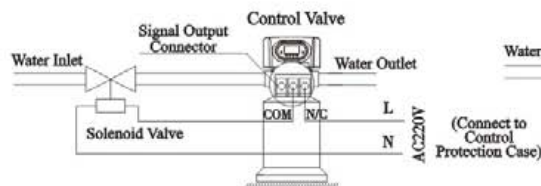


Figure 3-2 Wiring of Solenoid Valve on Inlet

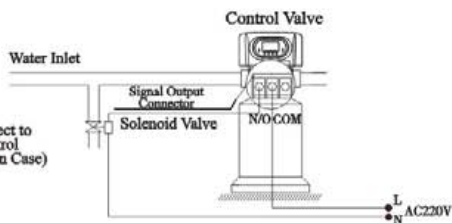


Figure 3-3 Wiring of Pressure Relief port

# Function:

When inlet pressure is high, install a solenoid valve on inlet to ensure valve switching properly. When valve is exactly at position of Service, Backwash, Brine& Slow Rinse, Brine Refill and Fast Rinse, solenoid valve is open. When valve is switching, solenoid valve is closed, no water flow into valve to ensure valve switching properly. It could prevent the problem of mix water and water hammer.

Use interlock cable to realize valves in parallel and series in same system which is suited for RO pretreatment system or second grade  $\text{Na}^+$  system. The Wiring refer to Figure 3-4:

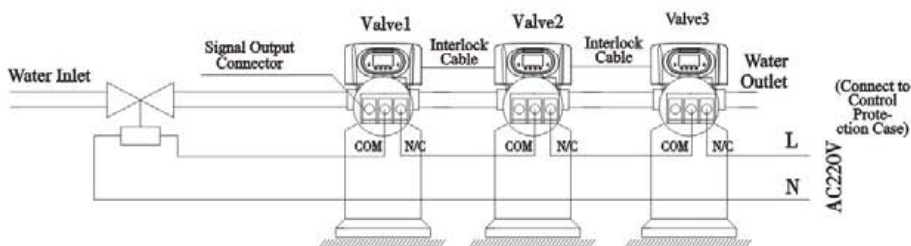


Figure 3-4 Wiring of Solenoid Vale in Inlet

## 2)Liquid Level Controller Controls Inlet Pump( Two-phase motor)( Set b-01)

**Instruction:** For the system using well or middle-tank supplying water, switch of liquid level controller and valve together control pump opening or closing. The wiring refers to Figure 3-5:

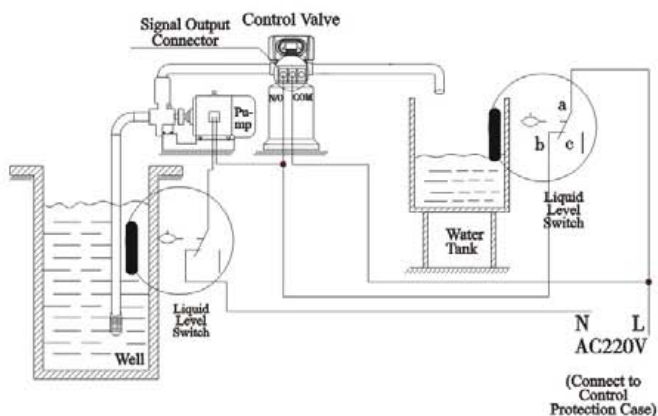


Figure 3-5 Wiring of Liquid Level Controller Controlling Inlet Pump



**Function:**

When valve in service status, if water tank is short of water, start up pump, but if water tank has enough water, the switch of liquid level controller is closed, so pump doesn't work.

When valve in regeneration cycle, inlet always has water no matter what is water condition in water tank. As Runxin valve no water pass outlet in regeneration cycle, it ensure no water fill into brine tank. A liquid switch at the top of well or in middle water tank in RO system protect pump from working without water in case of out of raw water.

**3) Liquid Level Switch in Water Tank Controls Inlet Pump (Three-phase) (Set b-01)**

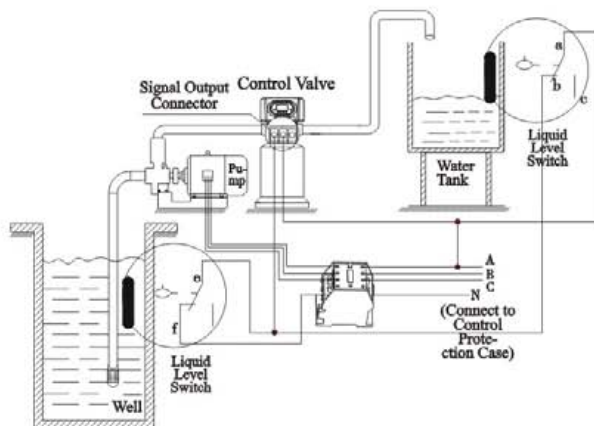


Figure 3-6 Wiring of Liquid Level Switch in Water Tank Controls Inlet Pump

**4)Control Inlet Booster Pump( Set b-01 or b-02)**

**Instruction:** If inlet water pressure is less than 0.15MPa, which makes backwash or brine difficult, a booster pump is suggested to be installed on inlet. Control mode b-01. When system in regeneration cycle, booster pump is open, the wiring refer to Figure 3-7.If the booster pump current is bigger than 5A, system need to install an contactor, the wiring refer to Figure3-8.

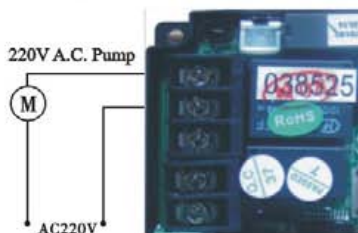


Figure 3-7Wiring of Booster Pump on Inlet

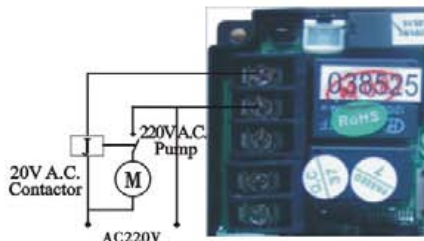


Figure 3-8 Wiring of Booster Pump on Inlet



## B. Interlock

### Instruction:

In the parallel water treatment system, it ensure only one valve in regeneration or washing cycle and (n-1) valves in service, that is, realizing the function of supplying water simultaneously and regenerating individually, the wiring refer to Figure 3-9

In the series and parallel water treatment system(Second grade Na<sup>+</sup> Exchanger or RO pre-treatment system), it ensure only one valve in regeneration or washing cycle and there is/are water(s) in service.

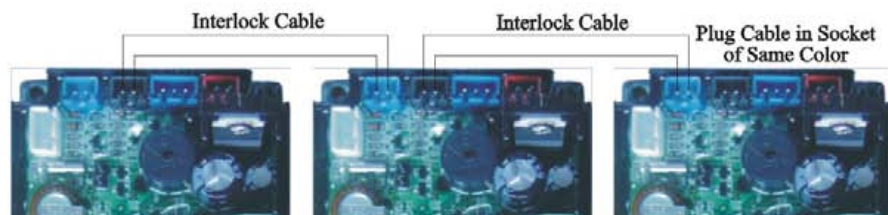


Figure 3-9 Network System Wiring with Interlock Cable

### Note:

Use Interlock Cable to connect CN8 to CN7 on next valve in the loop.

One system with several valves, if interlock cable is disconnected, the system is divided into two individual system.

## C. Pressure Relief Output

Runxin valve will cut off feeding water to drain line when it switches in regeneration cycles. Thus in some water treatment system, e.g. Deep Well, one booster pump was installed on the inlet to increase the system water feeding pressure, this cut-off will cause pressure on inlet rising too fast to damage the valve. Pressure Relief Output can be used to avoid this problem. The wiring refer to Figure 3-10

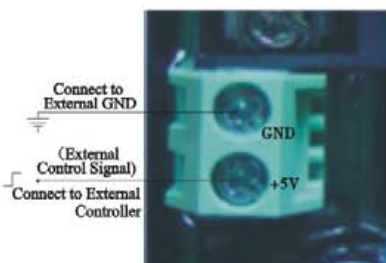
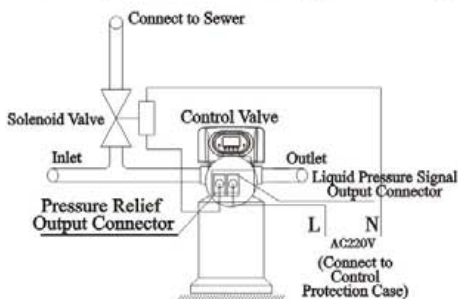


Figure 3-10 Wiring of Pressure Relief Output      Figure 3-11 Wiring of Remote Input

### D. Remote Handling Connector

Online TDS meter monitors treated water other than a flow meter, or PLC controls the regeneration time. When the controller receives a contact closure from above instruments, regeneration begins. The wiring refers to Figure 3-11:

### E. Interlock System

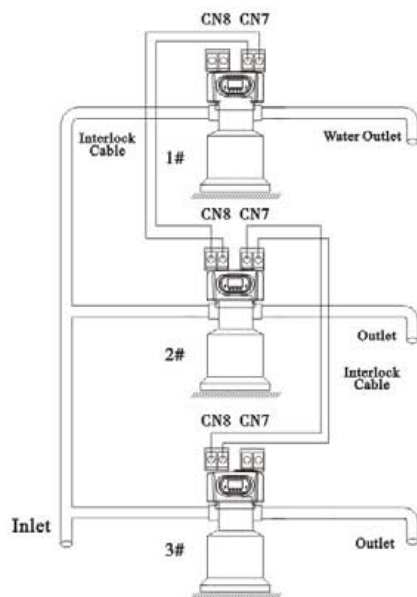


Figure 3-12 Interlock system

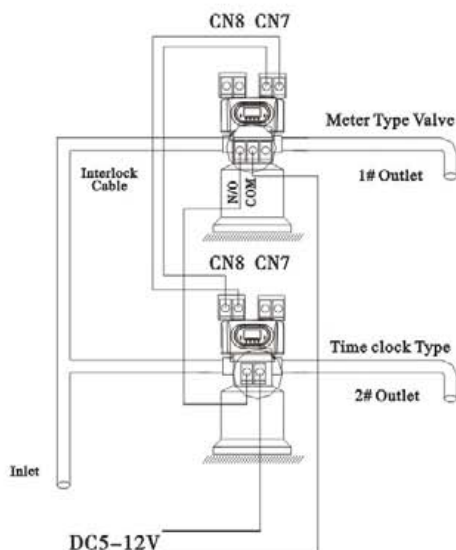


Figure 3-13 Series system

### F. Series System

This is a 2 or more than 2 valves system, all in service, with one flow meter for the entire system. For the time type valve, the regeneration time should be set and adjusted to the Max; for the meter type valve, connect its signal output connector with the remote handle connector of the time clock type valve. That can realize the function of supplying water simultaneously and regenerating orderly. The wiring refer to Figure 3-13:

### 3.3. System Configuration and Flow Rate Curve

#### A. Product Configuration


Product configuration with tank, resin volume, brine tank and injector

| Tank Size (mm)         | Resin Volume (L) | Flow Rate (t/h) | Brine Tank Size (mm)  | The Minimum Salt Consumption for Regeneration (Kg) | Injector Model |
|------------------------|------------------|-----------------|-----------------------|----------------------------------------------------|----------------|
| $\phi 180 \times 1130$ | 16               | 0.5             | $\phi 230 \times 520$ | 2.40                                               | 6302           |
| $\phi 205 \times 1300$ | 25               | 0.7             | $\phi 390 \times 810$ | 4.00                                               | 6303           |
| $\phi 255 \times 1390$ | 40               | 1.2             | $\phi 390 \times 810$ | 6.00                                               | 6305           |
| $\phi 300 \times 1650$ | 60               | 1.8             | $\phi 450 \times 940$ | 9.00                                               | 6306           |

**Attention:** The flow rate calculation is based on linear velocity 25m/hr; the minimum salt consumption for regeneration calculation is based on salt consumption 150g / (L resin).

#### B. Flow Rate characteristic

##### 1). Pressure-flow rate curve

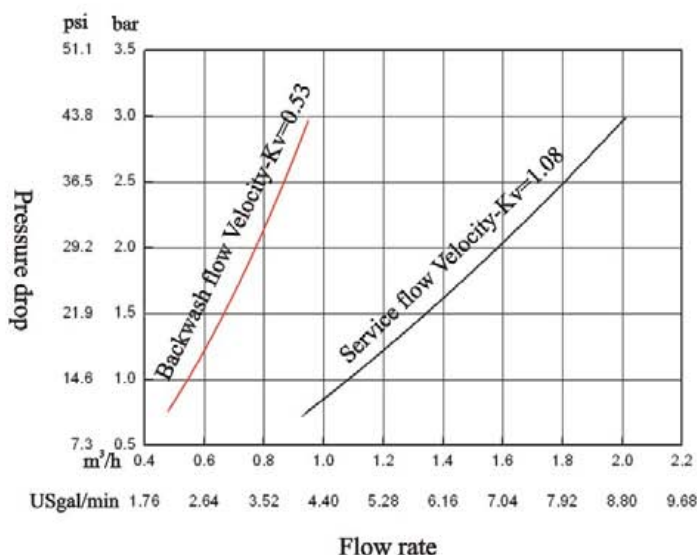

2). Injector parameter table

| Inlet Pressure | Draw Rate (L/M) |           |             |           |            |            |             |          |            |             |
|----------------|-----------------|-----------|-------------|-----------|------------|------------|-------------|----------|------------|-------------|
| Mpa            | 6301 Coffee     | 6302 Pink | 6303 Yellow | 6304 Blue | 6305 White | 6306 Black | 6307 Purple | 6308 Red | 6309 Green | 6310 Orange |
| 0.15           | 0.81            | 1.12      | 1.58        | 2.21      | 2.45       | 3.30       | 3.44        | 4.08     | 5.19       | 5.69        |
| 0.20           | 0.95            | 1.41      | 1.87        | 2.53      | 2.89       | 3.88       | 4.21        | 4.83     | 5.36       | 6.80        |
| 0.25           | 0.99            | 1.61      | 2.08        | 2.79      | 3.30       | 4.30       | 4.66        | 5.39     | 6.86       | 7.65        |
| 0.30           | 1.30            | 1.81      | 2.18        | 3.05      | 3.66       | 4.74       | 5.15        | 5.95     | 7.50       | 8.60        |
| 0.35           | 1.45            | 1.96      | 2.39        | 3.27      | 3.94       | 5.02       | 5.55        | 6.51     | 8.30       | 9.57        |
| 0.40           | 1.56            | 2.12      | 2.55        | 3.50      | 4.25       | 5.41       | 5.88        | 6.77     | 8.74       | 9.90        |

3). Configuration for Standard Injector and Drain Line Flow Control

| Tank Dia. mm | Injector Model | Injector Color | Draw Rate | Slow Rinse | Brine Refill | DLFC | Backwash / Fast Rinse |
|--------------|----------------|----------------|-----------|------------|--------------|------|-----------------------|
|              |                |                | L/m       | L/m        | L/m          |      | L/m                   |
| 150          | 6301           | Coffee         | 1.30      | 0.91       | 3.0          | 1#   | 4.7                   |
| 175          | 6302           | Pink           | 1.81      | 1.32       | 3.7          | 1#   | 4.7                   |
| 200          | 6303           | Yellow         | 2.18      | 1.73       | 3.8          | 2#   | 8.0                   |
| 225          | 6304           | Blue           | 3.05      | 2.14       | 3.3          | 2#   | 8.0                   |
| 250          | 6305           | White          | 3.66      | 2.81       | 4.3          | 3#   | 14.4                  |
| 300          | 6306           | Black          | 4.74      | 3.32       | 4.2          | 3#   | 14.4                  |

**Remark: Above data for the product configuration and relevant characteristics are only for reference. When put in practice, please subject to the different requirements of raw water hardness and application.**

### 3.4. Parameter Settlement

#### ① Service time T1

Water treatment capacity:

$$Q = V_R \times K \div Y_D \quad (\text{m}^3)$$

Hardness of inlet water (mmol/L)

Exchange factor (mmol/L) 400~1000.

Down-flow regeneration, take 400~750.

Up-flow regeneration, take 450~1000.

If the inlet water hardness is higher, the factor is smaller.

Resin volume (m<sup>3</sup>)

By hours:  $T1 = Q \div Q_h$  (Hour)

Water treatment capacity per hour (m<sup>3</sup>/h)

Water treatment capacity (m<sup>3</sup>)

By days:  $T1 = Q \div Q_d$  (Day)

Water treatment capacity per day (m<sup>3</sup>/d)

Water treatment capacity (m<sup>3</sup>)

#### ② Backwash time T2

It is subject to the turbidity of inlet water. Generally, It is suggested to be set 10 ~ 15 minutes. The higher the turbidity is, the longer backwash time can be set. However, if the turbidity is more than 5FTU, it should be better to install a filter in front of the exchanger.

#### ③ Brine& Slow rinse time T3

$$T3 = (40 \sim 50) \times H_R \quad (\text{min})$$

$$\text{Generally, } T3 = 45H_R \quad (\text{min})$$

In this formula,  $H_R$  — The height of resin in exchange tank (m)

#### ④ Brine refill time T4

$$\text{Down-flow regeneration: } T4 = 0.45 \times V_R \div \text{Brine refill speed (min)}$$

$$\text{Up-flow regeneration: } T4 = 0.34 \times V_R \div \text{Brine refill speed (min)}$$

In this formula,  $V_R$  — Resin volume (m<sup>3</sup>)

The Brine refill speed is related to inlet water pressure. It is suggested to lengthen 1~2 minutes of calculated brine refilling time to make sure there is enough water in tank.

(The condition is that there is a level controller installed in the brine tank)

#### ⑤ Fast rinse time T5

$$T5 = 12 \times H_R \quad (\text{min})$$

Generally, the water for fast rinse is 3 ~ 6 times of resin volume. It is suggested to be set 10 ~ 16 minutes, but subject to the outlet water reaching the requirement.



### ⑥ Exchange factor

Exchange factor= $E/(k \times 1000)$

In this formula, E—Resin working exchange capability ( $\text{mol/m}^3$ ), it is related to the quality of resin. Down-flow regeneration, take 800 ~ 900. Up-flow regeneration, take 900 ~ 1200.

K—Security factor, always take 1.2 ~ 2. it is related to the hardness of inlet water: the higher the hardness is, the bigger the K is.

### ⑦ Set up interval backwash times ( Only for F69 )

When the turbidity of raw water is higher, the interval backwash time could be set F-00. That is, backwash in each regeneration; when the turbidity is lower, the interval backwash time could be set F-01 (Or other number value), it is to say that backwash in every two regeneration. Thus, Service → Brine & Slow rinse → Brine refill → Fast rinse → Service → Backwash → Brine & Slow rinse → Brine refill → Fast rinse.

### ⑧ Regeneration time:

The whole cycle for generation is about two hours. Please try to set up the regeneration time when you don't need water according to the actual situation.


The calculation of parameters for each step is only for reference, the actual proper time will be determined after adjusting by water exchanger supplier. This calculation procedure of softener is only for industrial application; it is not suitable for small softener in residential application.

## 3.5. Parameter Enquiry and Setting

### 3.5.1. Parameter Enquiry

When  light on, press and hold both  and  for 5 seconds to lift the button lock statues; then press  and  light on, enter to program display mode; press  or  to view each value according to below process. (Press  exit and turn back to service status)



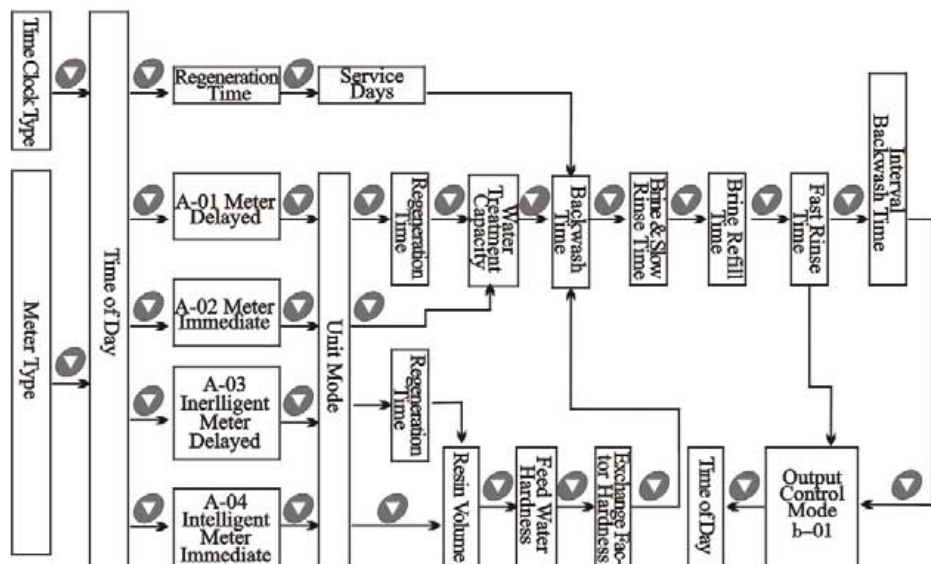

**Attention:** For the F69 valve, after enquiry “Unit Mode” or “Regeneration Time”, it will show “F-00”, which indicates the interval backwash times.


### 3.5.2.Parameter Setting


In program display mode, press and enter into program set mode. Press or to adjust the value.

### 3.5.3.The steps of parameter setting

| Items       | Process steps                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Symbol |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
| Time of Day | <p>When time of day “12:12” continuously flash, it reminds to reset;</p> <ol style="list-style-type: none"> <li>Press  to enter into program display mode; both  and  symbol light on, “:” flicker; Press , both  and hour value flash, through  or  to adjust the hour value;</li> <li>Press  again, both  and minute value flash, through  or  to adjust the minute value;</li> <li>Press  and hear a sound “Di”, then finish adjustment, press  to turn back.</li> </ol> |        |

|                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                                                                                     |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Control Mode             | <p>1. In control mode display status, press  and enter into program set mode,  and 01 value flash;</p> <p>2. Press  or , set the value to be A-01、A-02、A-03 or A-04 control mode;</p> <p>3. Press  and hear a sound “Di” , then finish adjustment, press  to turn back.</p>                                                                                                                                                                                                                                                                                                                                                                                              |    |
| Unit Mode                | <p>1. In unit mode display status, press  and enter into program set mode,  and 01 value flash;</p> <p>2. Press  or , and choose from the m<sup>3</sup>/L/gal;</p> <p>3. Press  and finish adjustment, press  to turn back.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                          |    |
| Regeneration Time        | <p>1. In regeneration time display status, it shows 02:00 Press  and enter into program set mode.  And 02 flash;</p> <p>Press  or  to adjust the hour value;</p> <p>2. Press  again,  and 00 flash, press  or  to adjust the minute value;</p> <p>3. Press  and hear a sound “Di” , then finish adjustment, press  to turn back.</p> |    |
| Interval Backwash Times  | <p>1. In Interval backwash time display status, it shows F-00. Press  and enter into program set mode.  And 00 value flash;</p> <p>2. Press  or , to adjust the interval backwash times value;</p> <p>3. Press  and hear a sound “Di” , then finish adjustment, press  to turn back.</p>                                                                                                                                                                                                                                                                                                                                                                              |    |
| Water Treatment Capacity | <p>1. In water treatment capacity display status, it shows  and 10.00. Press  and enter into program set mode.  And 10.00 flash;</p> <p>2. Press  or , to adjust the water treatment capacity value (m<sup>3</sup>) ;</p> <p>3. Press  and hear a sound “Di” , then finish adjustment, press  to turn back.</p>                                                                                                                                                                                                                                                           |  |
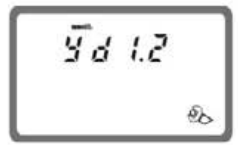
|                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |                                                                                     |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Resin Volume           | <p>1. In resin volume display status, it shows 100L. Press  and enters into program set mode.  and 100 value flash;</p> <p>2. Press  or  to adjust the volume value(L);</p> <p>3. Press  and hear a sound "Di", then finish adjustment, press  to turn back.</p>                                                                                                                    |    |
| Feed Water Hardness    | <p>1. In feed water hardness display status, it shows yd1.2. Press  and enter into program set mode.  And 1.2 value flash;</p> <p>2. Press  or  to adjust the hardness value (mmol/L) ;</p> <p>3. Press  and hear a sound "Di", then finish adjustment, press  to turn back.</p>                                                                                                    |    |
| Exchange Factor        | <p>1. In exchange factor display status, it shows AL.55. Press  and enter into program set mode.  And 55 flash; ;</p> <p>2. Press  or  to adjust the exchange factor value;</p> <p>3. Press  and hear a sound "Di", then finish adjustment, press  to turn back.</p>                                                                                                                |    |
| Backwash Time          | <p>1. In backwash time display status, it shows  and 2-10:00. Press  and enter into program set mode.  and 10:00 flash;</p> <p>2. Press  or  to adjust the backwash time (minute);</p> <p>3. Press  and hear a sound "Di", then finish adjustment, press  to turn back.</p>                    |   |
| Brine& Slow Rinse Time | <p>1. In brine&amp; slow rinse time display status, it shows  and 3-60:00. Press  and enter into program set mode.  and 60:00 flash;</p> <p>2. Press  or  to adjust the brine time(minute);</p> <p>3. Press  and hear a sound "Di", then finish adjustment, press  to turn back.</p> |  |
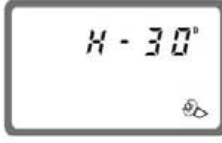
|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                                                                    |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| Brine Refill Time                  | <p>1. In brine refill time display status, it shows  and 4-05:00, Press  and enter into program set mode.  And 05:00 flash;</p> <p>2. Press  or  to modify the brine refill time (minute);</p> <p>3. Press  and hear a sound "Di", then finish adjustment, press  to turn back.</p> |   |
| Fast Rinse Time                    | <p>1. In fast rinse time display status, it shows  and 5-10:00. Press  and enter into program set mode.  And 10:00 flash;</p> <p>2. Press  or  to adjust the fast rinse time (minute);</p> <p>3. Press  and hear a sound "Di", then finish adjustment, press  to turn back.</p>     |   |
| Maximum Interval Regeneration Days | <p>1. In maximum Interval regeneration days display status, it shows H-30. Press  and enter into program set mode.  And 30 flash;</p> <p>2. Press  or  to adjust the Interval regeneration days;</p> <p>3. Press  and hear a sound "Di", then finish adjustment, press  to turn back.</p>                                                                            |   |
| Signal Output Mode                 | <p>1. In signal output mode display status, it shows b-01. Press  and enter into program set mode.  and 01 flash;</p> <p>2. Press  or  to adjust the b-02;</p> <p>3. Press  and hear a sound "Di", then finish adjustment, press  to turn back.</p>                                                                                                         |  |

For example, the fast rinse time of a softener is 12 minutes. After regenerating, the chloridion in the outlet water is always higher than normal, indicating that there is not enough time for fast rinse. If you want the time to set to 15 minutes, the modification steps as follows:

- ① Press and hold both  and  to lift the button lock statues (  light off ) ;
- ② Press ,  and light on;
- ③ Press  or  continuously until  light on. Then the digital area shows: 5-12M;
- ④ Press ,  and 12 flash;
- ⑤ Press  continuously until 12 changed to 15;

⑥ Press , there is a sound “Di” and the figure stop flashing; the program back to enquiry status

⑦ If you want to adjust other parameters, you can repeat the steps from ② to ⑤; If you don't, press  and quit from the enquiry stat, the display will show the current service status.

### 3.6. Trial Running

After installing the multi-functional flow control valve on the resin tank with the connected pipes, as well as setting up the relevant parameter, please conduct the trial running as follows:

A. Close the inlet valve B & C, and open the bypass valve A. After cleaning the foreign materials in the pipe, close the bypass valve A. (As Figure 1-3 shows)

B. Fill the brine tank with the planned amount of water and adjust the air check valve. Then add solid salt to the tank and dissolve the salt as much as possible.

C. Switch on power. Press  and go in the Backwash position; when  light on, slowly open the inlet valve B to 1/4 position, making the water flow into the resin tank; you can hear the sound of air-out from the drain pipeline. After all air is out of pipeline, then open inlet valve B completely and clean the foreign materials in the resin tank until the outlet water is clean. It will take 8 ~ 10 minutes to finish the whole process.

D. Press , turning the position from Backwash to Brine& Slow Rinse;  light on and enter in the process of Brine& Slow Rinse. The air check valve close when control valve finished sucking brine, then slow rinse start to work. It is about 60 ~ 65minutes for whole process.

E. Press , to Brine refill position.  light on and it indicates the brine tank is being refilled with water to the required level. It takes about 5 ~ 6minutes, then add solid salt to the brine tank.

F. Press , turning to Fast Rinse position.  light on and start to fast rinse. After 10 ~ 15minutes, take out some outlet water for testing: if the water hardness reach the requirement, and the chloridion in the water is almost the same compared with the inlet water, then go to the next step.

G. Press , making the control valve return to Service Status;  light on and start to running.



Note:

- When the control valve enters into the regeneration status, all program can be finished automatically according to the setting time; if you want one of steps terminated early, you can press .
- If water inflow too fast, the media in tank will be damaged. When water inflow slowly, there is a sound of air emptying from drain pipeline.
- After changing resin, please empty air in the resin according to the above Step C .
- In the process of trial running, please check the water situation in all position, ensuring there are no resin leakage.
- The time for Backwash, Brine& Slow Rinse, Brine Refill and Fast Rinse position can be set and executed according to the calculation in the formula or suggestions from the control valve suppliers.

**3.7. Trouble-Shooting****A. Control Valve Fault**

| Problem                              | Cause                                                                                                                                                                                                                                                                                                                         | Correction                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1. Softener fails to regenerate.     | A. Electrical service to unit has been interrupted.<br>B. Regeneration cycles set incorrect.<br>C. Controller is defective.<br>D. Motor fails to work.                                                                                                                                                                        | A. Assure permanent electrical service (Check fuse, plug, pull chain or switch).<br>B. Reset regeneration cycles.<br>C. Replace controller.<br>D. Replace motor.                                                                                                                                                                                                                                                                                               |
| 2. Regeneration time is not correct. | A. Time of Day not set correctly.<br>B. Power failure more than 3 days.                                                                                                                                                                                                                                                       | A. Check program and reset time of day.<br>B. Reset time of day.                                                                                                                                                                                                                                                                                                                                                                                               |
| 3. Softener supply hard water.       | A. Bypass valve is open or leaking.<br>B. No salt in brine tank.<br>C. Injector plugged.<br>D. Insufficient water flowing into brine tank.<br>E. Leak at O-ring on riser pipe.<br>F. Internal valve leak.<br>G. Regeneration cycles not correct.<br>H. Shortage of resin.<br>I. Bad quality of feed water or turbine blocked. | A. Close or repair bypass valve.<br>B. Add salt to brine tank and maintain salt level above water level.<br>C. Change or clean injector.<br>D. Check brine tank refill time.<br>E. Make sure riser pipe is not cracked. Check o-ring and tube pilot.<br>F. Change valve body.<br>G. Set correct regeneration cycles in the program.<br>H. Add resin to mineral tank and check whether resin leaks.<br>I. Reduce the inlet turbidity, clean or replace turbine. |
| 4. Softener fails to draw brine.     | A. Line pressure is too low.<br>B. Brine line is plugged.<br>C. Brine line is leaking.<br>D. Injector is plugged.<br>E. Internal control leak.<br>F. Drain line is plugged.<br>G. Sizes of injector and DLFC not match with tank.                                                                                             | A. Increase line pressure.<br>B. Clean brine line.<br>C. Replace brine line.<br>D. Clean or replace new parts.<br>E. Replace valve body.<br>F. Clean drain line flow control.<br>G. Select correct injector size and DLFC according to the instruction requirements.                                                                                                                                                                                           |
| 5. Unit used too much salt.          | A. Improper salt setting.<br>B. Excessive water in brine tank.                                                                                                                                                                                                                                                                | A. Check salt usage and salt setting.<br>B. See problem no.6.                                                                                                                                                                                                                                                                                                                                                                                                  |

|                                                                 |                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                            |
|-----------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6. Excessive water in brine tank.                               | A. Overlong refilling time.<br>B. Foreign material in brine line.<br>C. Foreign material in brine valve and plug drain line flow control.<br>D. Not install safety brine valve but power failure while salting.<br>E. Safety brine valve breakdown.                                      | A. Reset correct refilling time.<br>B. Clean brine line.<br>C. Clean brine valve and brine line.<br>D. Stop water supplying and restart or install safety brine valve in salt tank.<br>E. Repair or replace safety brine valve.                                                                            |
| 7. Pressure lost or iron in conditioned water.                  | A. Iron in the water supply pipe.<br>B. Iron mass in the softener.<br>C. Fouled resin bed.<br>D. Too much iron in the raw water.                                                                                                                                                         | A. Clean the water supply pipe.<br>B. Clean valve and add resin cleaning chemical, increase frequency of regeneration.<br>C. Check backwash, brine draw and brine tank refill. Increase frequency of regeneration and backwash time.<br>D. Iron removal equipment is required to install before softening. |
| 8. Loss of mineral through drain line.                          | A. Air in water system.<br>B. Bottom strainer broken.<br>C. Improperly sized drain line control.                                                                                                                                                                                         | A. Assure that well system has proper air eliminator control.<br>B. Replace new bottom strainer.<br>C. Check for proper drain rate.                                                                                                                                                                        |
| 9. Control cycle continuously.                                  | A. Locating signal wiring break down.<br>B. Controller is faulty.<br>C. Foreign material stuck the driving gear.<br>D. Time of regeneration steps were set to zero.                                                                                                                      | A. Check and connect locating signal wiring.<br>B. Replace controller.<br>C. Take out foreign material.<br>D. Check program setting and reset.                                                                                                                                                             |
| 10. Drain flows continuously.                                   | A. Internal valve leak.<br>B. When electricity fails to supply, valve stops backwash or rapid rinse position.                                                                                                                                                                            | A. Check and repair valve body or replace it.<br>B. Adjust valve to service position or turn off bypass valve and restart when electricity supply.                                                                                                                                                         |
| 11. Interrupted or irregular brine.                             | A. Water pressure too low or not stable.<br>B. Injector is plugged or faulty.<br>C. Air in resin tank.<br>D. Floccules in resin tank during backwash.                                                                                                                                    | A. Increase water pressure.<br>B. Clean or replace injector.<br>C. Check and find the reason.<br>D. Clean the floccules in resin tank.                                                                                                                                                                     |
| 12. Water flow out from drain or brine pipe after regeneration. | A. Foreign material in valve which makes valve can't be closed completely.<br>B. Hard water mixed in valve body.<br>C. Water pressure is too high which result in valve doesn't get the right position.<br>D. Under the Backwash position, the outlet line and brine line are connected. | A. Clean foreign material in valve body.<br>B. Change valve core or sealing ring.<br>C. Reduce water pressure or use pressure release function.<br>D. installs a check valve, solenoid valve in front of the outlet or installs a liquid level controller in the brine tank.                               |



|                                   |                                                                                                                                                                                                                                |                                                                                                                                                                                                                                                                                                                                                                                  |
|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 13. Salt water in softener water. | A. Foreign material in injector or injector fails to work.<br>B. Brine valve cannot be shut-off.<br>C. Time of rapid rinse too short.                                                                                          | A. Clean and repair injector.<br>B. Repair brine valve and clean it.<br>C. Extend rapid rinse time.                                                                                                                                                                                                                                                                              |
| 14. Unit capacity decreases.      | A. Unit fails to regenerate or regenerate not properly.<br>B. Fouled resin bed.<br>C. Salt setting not proper.<br>D. Softener setting not proper.<br>E. Raw water quality deterioration.<br>F. Turbine of flow meter is stuck. | A. Regenerate according to the correct operation requirement.<br>B. Increase backwash flow rate and time, clean or change resin.<br>C. Readjust brine drawing time.<br>D. According to the test of outlet water, recount and reset.<br>E. Regenerate unit by manual temporary then reset regeneration cycle.<br>F. Disassemble flow meter and clean it or replace a new turbine. |

#### B. Controller Fault

| Problem                                   | Cause                                                                                                                                                                                                                      | Correction                                                                                                                                                       |
|-------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1. All indicators display on front panel. | A. Wiring of front panel with controller fails to work.<br>B. Control board is faulty.<br>C. Transformer damaged.<br>D. Electrical service not stable.                                                                     | A. Check and replace the wiring.<br>B. Replace control board.<br>C. Check and replace transformer.<br>D. Check and adjust electrical service.                    |
| 2. No display on front panel.             | A. Wiring of front panel with controller fails to work.<br>B. Front panel damaged.<br>C. Control board damaged.<br>D. Electricity is interrupted.                                                                          | A. Check and replace wiring.<br>B. Replace front panel.<br>C. Replace control board.<br>D. Check electricity.                                                    |
| 3. E1 Flash                               | A. Wiring of locating board with controller fails to work.<br>B. Locating board damaged.<br>C. Mechanical driven failure.<br>D. Faulty control board.<br>E. Wiring of motor with controller is fault.<br>F. Motor damaged. | A. Replace wiring.<br>B. Replace locating board.<br>C. Check and repair mechanical part.<br>D. Replace control board.<br>E. Replace wiring.<br>F. Replace motor. |
| 4. E2 Flash                               | A. Hall component on locating board damaged.<br>B. Wiring of locating board with controller fails to work.<br>C. Control board is faulty.                                                                                  | A. Replace locating board.<br>B. Replace wiring.<br>C. Replace control board.                                                                                    |
| 5. E3 or E4 Flash                         | A. Control board is faulty.                                                                                                                                                                                                | A. Replace control board.                                                                                                                                        |

### 3.8. Assembly & Parts

#### Flow Meter Connector & Animated Connector

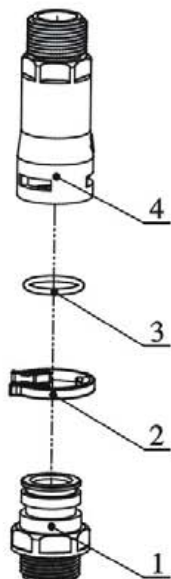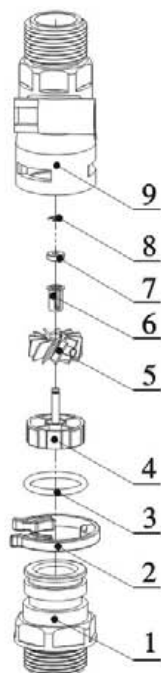


| 5447002 Flow Meter |                     |          |          |
|--------------------|---------------------|----------|----------|
| Item No.           | Description         | Part No. | Quantity |
| 1                  | Animated Nut        | 8458014  | 1        |
| 2                  | Clip                | 8270005  | 1        |
| 3                  | O-ring 21.89 × 2.62 | 8378064  | 1        |
| 4                  | Impeller Supporter  | 5115003  | 1        |
| 5                  | Impeller            | 5436002  | 1        |
| 6                  | Rotate Core         | 8211001  | 1        |
| 7                  | Bushing             | 8210001  | 1        |
| 8                  | Spring Check Ring   | 8994005  | 1        |
| 9                  | Shell               | 8002006  | 1        |

| 5457003 Animated Connector |                     |          |          |
|----------------------------|---------------------|----------|----------|
| Item No.                   | Description         | Part No. | Quantity |
| 1                          | Animated Nut        | 8458014  | 1        |
| 2                          | Clip                | 8270005  | 1        |
| 3                          | O-ring 21.89 × 2.62 | 8378064  | 1        |
| 4                          | Connector           | 8458039  | 1        |
|                            |                     |          |          |
|                            |                     |          |          |
|                            |                     |          |          |
|                            |                     |          |          |
|                            |                     |          |          |



F65B3&F69A3 Valve Body Assembly

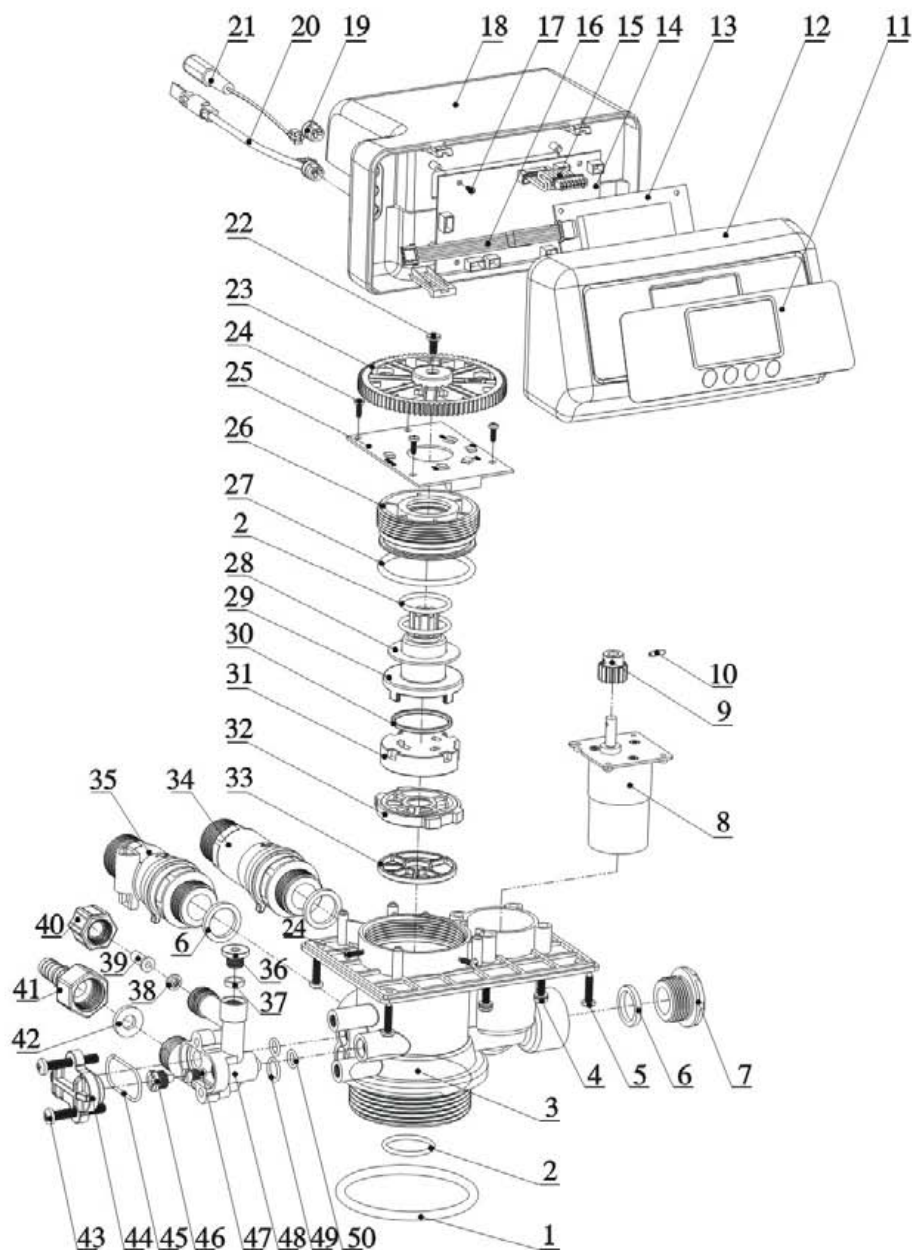

**MODEL F65B1/F65B3/F65G1/F65G3/F69A1/F69A3/F69G1/F69G3**

**F65B3/F65B1 Valve Body Components (Item No.20,34,35 only for 65B3)**


| Item No. | Description             | Part No. | Quantity | Item No. | Description             | Part No. | Quantity |
|----------|-------------------------|----------|----------|----------|-------------------------|----------|----------|
| 1        | O-ring 73×5.3           | 8378143  | 1        | 26       | Fitting Nut             | 8092007  | 1        |
| 2        | O-ring 25.8×2.65        | 8378078  | 3        | 27       | O-ring 50.39×3.53       | 8378107  | 1        |
| 3        | Valve Body (ABS+GF10)   | 5022018  | 1        | 28       | Anti-friction Washer    | 8216010  | 1        |
|          | Valve Body (PPO+GF20)   | 5022019  |          | 29       | Shaft                   | 8258009  | 1        |
| 4        | Screw, Cross M4×25      | 8902008  | 4        | 30       | Moving Seal Ring        | 8370053  | 1        |
| 5        | Screw, Cross ST3.9×16   | 8909016  | 4        | 31       | Moving Disk             | 8459013  | 1        |
| 6        | Sealing Ring            | 8371019  | 3        | 32       | Fixed Disk              | 8469012  | 1        |
| 7        | Plug                    | 8323005  | 1        | 33       | Sealing Ring            | 8370025  | 1        |
| 8        | Motor                   | 6158006  | 1        | 34       | Animated Connector      | 5457003  | 1        |
| 9        | Small Gear, Motor       | 8241010  | 1        | 35       | Flow Meter              | 5447002  | 1        |
| 10       | Pin                     | 8993001  | 1        | 36       | Plug                    | 8323002  | 1        |
| 11       | Label                   | 8865004  | 1        | 37       | Sealing Ring            | 8370003  | 1        |
| 12       | Front Cover             | 8300004  | 1        | 38       | Brine Line Flow Control | 8468002  | 1        |
| 13       | Display Board           | 6381003  | 1        | 39       | Tube                    | 8457004  | 1        |
| 14       | Control Board           | 6382003  | 1        | 40       | Nut, Nex.Hd.            | 8940001  | 1        |
| 15       | Wire for Locating Board | 5511002  | 1        | 41       | Joint                   | 8458017  | 1        |
| 16       | Wire for Display Board  | 5512001  | 1        | 42       | Drain Line Flow Control | 8468007  | 1        |
| 17       | Screw, Cross ST2.2×6.5  | 8909004  | 2        | 43       | Screw, Cross M5×35      | 8902017  | 2        |
| 18       | Dust Cover              | 8005005  | 1        | 44       | Cover, Injector         | 8315001  | 1        |
| 19       | Cable Clip              | 8126004  | 2        | 45       | O-ring 30×1.8           | 8378025  | 1        |
| 20       | Probe wire              | 6386001  | 1        | 46       | Nozzle, Injector        | 8454009  | 1        |
| 21       | Wire for Power          | 5513001  | 1        | 47       | Throat, Injector        | 8467009  | 1        |
| 22       | Screw, Cross ST3.9×13   | 8909013  | 1        | 48       | Injector Body           | 8008001  | 1        |
| 23       | Big Gear, Driven        | 5241005  | 1        | 49       | O-ring 10.82×1.78       | 8378012  | 1        |
| 24       | Screw, Cross ST2.9×9.5  | 8909008  | 7        | 50       | O-ring 7.5×1.8          | 8378016  | 2        |
| 25       | Locating Board          | 6380003  | 1        |          |                         |          |          |

**MODEL F65B1/F65B3/F65G1/F65G3/F69A1/F69A3/F69G1/F69G3**

**F69A3/F69A1 Valve Body Components (Item No. 20, 34, 35 only for F69A3)**

| Item No. | Description             | Part No. | Quantity | Item No. | Description             | Part No. | Quantity |
|----------|-------------------------|----------|----------|----------|-------------------------|----------|----------|
| 1        | O-ring 73×5.3           | 8378143  | 1        | 26       | Fitting Nut             | 8092007  | 1        |
| 2        | O-ring 25.8×2.65        | 8378078  | 3        | 27       | O-ring 50.39×3.53       | 8378107  | 1        |
| 3        | Valve Body (ABS+GF10)   | 5022024  | 1        | 28       | Anti-friction Washer    | 8216010  | 1        |
|          | Valve Body (PPO+GF20)   | 5022025  |          | 29       | Shaft                   | 8258009  | 1        |
| 4        | Screw, Cross M4×25      | 8902008  | 4        | 30       | Moving Seal Ring        | 8370053  | 1        |
| 5        | Screw, Cross ST3.9×16   | 8909016  | 4        | 31       | Moving Disk             | 8459016  | 1        |
| 6        | Sealing Ring            | 8371019  | 3        | 32       | Fixed Disk              | 8469015  | 1        |
| 7        | Plug                    | 8323005  | 1        | 33       | Sealing Ring            | 8370034  | 1        |
| 8        | Motor                   | 6158006  | 1        | 34       | Animated Connector      | 5457003  | 1        |
| 9        | Small Gear, Motor       | 8241010  | 1        | 35       | Flow Meter              | 5447002  | 1        |
| 10       | Pin                     | 8993001  | 1        | 36       | Plug                    | 8323002  | 1        |
| 11       | Label                   | 8865008  | 1        | 37       | Sealing Ring            | 8370003  | 1        |
| 12       | Front Cover             | 8300008  | 1        | 38       | Brine Line Flow Control | 8468002  | 1        |
| 13       | Display Board           | 6381003  | 1        | 39       | Tube                    | 8457004  | 1        |
| 14       | Control Board           | 6382003  | 1        | 40       | Nut, Nex. Hd.           | 8940001  | 1        |
| 15       | Wire for Locating Board | 5511002  | 1        | 41       | Joint                   | 8458017  | 1        |
| 16       | Wire for Display Board  | 5512001  | 1        | 42       | Drain Line Flow Control | 8468007  | 1        |
| 17       | Screw, Cross ST2.2×6.5  | 8909004  | 2        | 43       | Screw, Cross M5×35      | 8902017  | 2        |
| 18       | Dust Cover              | 8005008  | 1        | 44       | Cover, Injector         | 8315001  | 1        |
| 19       | Cable Clip              | 8126004  | 2        | 45       | O-ring 30×1.8           | 8378025  | 1        |
| 20       | Probe wire              | 6386001  | 1        | 46       | Nozzle, Injector        | 8454009  | 1        |
| 21       | Wire for Power          | 5513001  | 1        | 47       | Throat, Injector        | 8467009  | 1        |
| 22       | Screw, Cross ST3.9×13   | 8909013  | 1        | 48       | Injector Body           | 8008001  | 1        |
| 23       | Big Gear, Driven        | 5241005  | 1        | 49       | O-ring 10.82×1.78       | 8378012  | 1        |
| 24       | Screw, Cross ST2.9×9.5  | 8909008  | 7        | 50       | O-ring 7.5×1.8          | 8378016  | 2        |
| 25       | Locating Board          | 6380008  | 1        |          |                         |          |          |

F65G3 & F69G3 Valve Body Assembly

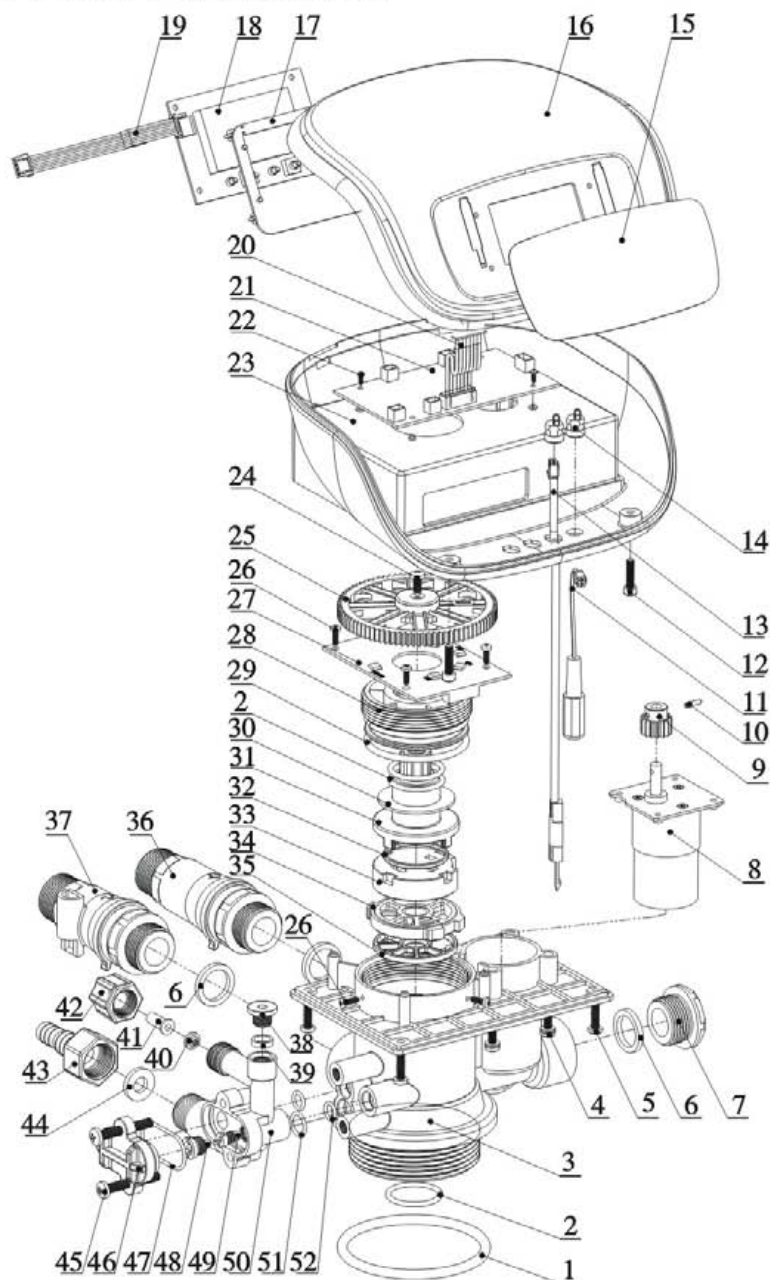

**MODEL F65B1/F65B3/F65G1/F65G3/F69A1/F69A3/F69G1/F69G3**

**F65G3/F65G1 Valve Body Components (Item No. 13, 36, 37only for F65G3)**

| Item No. | Description             | Part No. | Quantity | Item No. | Description             | Part No. | Quantity |
|----------|-------------------------|----------|----------|----------|-------------------------|----------|----------|
| 1        | O-ring 73×5.3           | 8378143  | 1        | 27       | Locating Board          | 6380003  | 1        |
| 2        | O-ring 25.8×2.65        | 8378078  | 1        | 28       | Fitting Nut             | 8092007  | 1        |
| 3        | Valve Body (ABS+GF10)   | 5022018  | 1        | 29       | O-ring 50.39×3.53       | 8378107  | 1        |
|          | Valve Body (PPO+GF20)   | 5022019  |          |          |                         |          |          |
| 4        | Screw, Cross M4×25      | 8902008  | 4        | 30       | Anti-friction Washer    | 8216010  | 1        |
| 5        | Screw, Cross ST3.9×16   | 8909016  | 4        | 31       | Shaft                   | 8258009  | 1        |
| 6        | Sealing Ring Φ24×Φ18×3  | 8371019  | 3        | 32       | Moving Seal Ring        | 8370053  | 1        |
| 7        | Plug                    | 8323005  | 1        | 33       | Moving Disk             | 8459013  | 1        |
| 8        | Motor                   | 6158006  | 1        | 34       | Fixed Disk              | 8469012  | 1        |
| 9        | Small Gear, Motor       | 8241010  | 1        | 35       | Sealing Ring            | 8370025  | 1        |
| 10       | Pin                     | 8993001  | 1        | 36       | Animated Connector      | 5457003  | 1        |
| 11       | Wire for Power          | 5513001  | 1        | 37       | Flow Meter              | 5447002  | 1        |
| 12       | UBK                     | 8902016  | 2        | 38       | Plug                    | 8323002  | 1        |
| 13       | Probe wire              | 6386001  | 1        | 39       | Sealing Ring            | 8370003  | 1        |
| 14       | Cable Clip              | 8126004  | 2        | 40       | Brine Line Flow Control | 8468002  | 1        |
| 15       | Label                   | 8865021  | 1        | 41       | Tube                    | 8457004  | 1        |
| 16       | Front Cover             | 5300002  | 1        | 42       | Nut,Nex.Hd.             | 8940001  | 1        |
| 17       | Toggle                  | 8109028  | 1        | 43       | Joint                   | 8458017  | 1        |
| 18       | Display Board           | 6381003  | 1        | 44       | Drain Line Flow Control | 8468007  | 1        |
| 19       | Wire for Display Board  | 5512001  | 1        | 45       | Screw, Cross M5×35      | 8902017  | 2        |
| 20       | Wire for Locating Board | 5511001  | 1        | 46       | Cover, Inject           | 8315001  | 1        |
| 21       | Control Board           | 6382003  | 1        | 47       | O-ring 30×1.8           | 8378025  | 1        |
| 22       | Screw, Cross ST2.2×6.5  | 8909004  | 2        | 48       | Nozzle, Injector        | 8454009  | 1        |
| 23       | Dust Cover              | 8005020  | 1        | 49       | Throat, Injector        | 8467009  | 1        |
| 24       | Screw, Cross ST3.9×13   | 8909013  | 1        | 50       | Injector Body           | 8008001  | 1        |
| 25       | Big Gear, Driven        | 5241005  | 1        | 51       | O-ring 10.82×1.78       | 8378012  | 1        |
| 26       | Screw, Cross ST2.9×9.5  | 8909008  | 7        | 52       | O-ring 7.5×1.8          | 8378016  | 2        |

MODEL F65B1/F65B3/F65G1/F65G3/F69A1/F69A3/F69G1/F69G3

F69G3/F69G1 Valve Body Components (Item No. 13, 36, 37only for F69G3)

| Item No. | Description             | Part No. | Quantity | Item No. | Description             | Part No. | Quantity |
|----------|-------------------------|----------|----------|----------|-------------------------|----------|----------|
| 1        | O-ring 73×5.3           | 8378143  | 1        | 27       | Locating Board          | 6380003  | 1        |
| 2        | O-ring 25.8×2.65        | 8378078  | 1        | 28       | Fitting Nut             | 8092007  | 1        |
| 3        | Valve Body (ABS+GF10)   | 5022024  | 1        | 29       | O-ring 50.39×3.53       | 8378107  | 1        |
|          | Valve Body (PPO+GF20)   | 5022025  |          | 30       | Anti-friction Washer    | 8216010  | 1        |
| 4        | Screw, Cross M4×25      | 8902008  | 4        | 31       | Shaft                   | 8258009  | 1        |
| 5        | Screw, Cross ST3.9×16   | 8909016  | 4        | 32       | Moving Seal Ring        | 8370053  | 1        |
| 6        | Sealing Ring            | 8371019  | 3        | 33       | Moving Disk             | 8459016  | 1        |
| 7        | Plug                    | 8323005  | 1        | 34       | Fixed Disk              | 8469015  | 1        |
| 8        | Motor                   | 6158006  | 1        | 35       | Sealing Ring            | 8370034  | 1        |
| 9        | Small Gear, Motor       | 8241010  | 1        | 36       | Animated Connector      | 5457003  | 1        |
| 10       | Pin                     | 8993001  | 1        | 37       | Flow Meter              | 5447002  | 1        |
| 11       | Wire for Power          | 5513001  | 1        | 38       | Plug                    | 8323002  | 1        |
| 12       | UBK                     | 8902016  | 2        | 39       | Sealing Ring            | 8370003  | 1        |
| 13       | Probe wire              | 6386001  | 1        | 40       | Brine Line Flow Control | 8468002  | 1        |
| 14       | Cable Clip              | 8126004  | 2        | 41       | Tube                    | 8457004  | 1        |
| 15       | Label                   | 8865021  | 1        | 42       | Nut,Nex.Hd.             | 8940001  | 1        |
| 16       | Front Cover             | 5300002  | 1        | 43       | Joint                   | 8458017  | 1        |
| 17       | Toggle                  | 8109028  | 1        | 44       | Drain Line Flow Control | 8468007  | 1        |
| 18       | Display Board           | 6381003  | 1        | 45       | Screw, Cross M5×35      | 8902017  | 2        |
| 19       | Wire for Display Board  | 5512001  | 1        | 46       | Cover, Inject           | 8315001  | 1        |
| 20       | Wire for Locating Board | 5511001  | 1        | 47       | O-ring 30×1.8           | 8378025  | 1        |
| 21       | Control Board           | 6382003  | 1        | 48       | Nozzle, Injector        | 8454009  | 1        |
| 22       | Screw, Cross ST2.2×6.5  | 8909004  | 2        | 49       | Throat, Injector        | 8467009  | 1        |
| 23       | Dust Cover              | 8005020  | 1        | 50       | Injector Body           | 8008001  | 1        |
| 24       | Screw, Cross ST3.9×13   | 8909013  | 1        | 51       | O-ring 10.82×1.78       | 8378012  | 1        |
| 25       | Big Gear, Driven        | 5241005  | 1        | 52       | O-ring 7.5×1.8          | 8378016  | 2        |
| 26       | Screw, Cross ST2.9×9.5  | 8909008  | 7        |          |                         |          |          |



## 4. Warranty Card

Dear client:

This warranty card is the guarantee proof of RUNXIN brand multi-functional flow control valve. It is kept by client self. You could get the after-sales services from the supplier which is appointed by RUNXIN manufacturer. Please keep it properly. It couldn't be retrieved if lost. It couldn't be repaired free of charge under the below conditions:

1. Guarantee period expired. (One year);
2. Damage resulting from using, maintenance, and keeping that are not in accordance with the instruction;
3. Damage resulting from repairing not by the appointed maintenance personnel;
4. Content in guarantee proof is unconfirmed with the label on the real good or be altered;
5. Damage resulting from force majeure.

|                       |                                                                                                                                                          |                        |  |                           |
|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|--|---------------------------|
| Product Name          |  <b>Multi-functional Flow Control Valve for Water Treatment Systems</b> |                        |  |                           |
| Model                 |                                                                                                                                                          | Code of Valve Body     |  |                           |
| Purchase Company Name |                                                                                                                                                          | Tel/Cel.               |  |                           |
| Problem               |                                                                                                                                                          |                        |  |                           |
| Solution              |                                                                                                                                                          |                        |  |                           |
| Date of Repairing     |                                                                                                                                                          | Date of Accomplishment |  | Maintenance Man Signature |

When product need warranty service, please fill in the below content and sent this card together with the product to the appointed suppliers or Runxin company.

|                                                                                           |                                         |                           |  |  |
|-------------------------------------------------------------------------------------------|-----------------------------------------|---------------------------|--|--|
| End-user Company Name                                                                     |                                         | Tel/Cel.                  |  |  |
| Purchase Company Name                                                                     |                                         | Tel/Cel.                  |  |  |
| Model                                                                                     |                                         | Code of Valve Body        |  |  |
| Tank Size $\phi$ ×                                                                        | Resin Tank Size L                       | Raw Water Hardness mmol/L |  |  |
| Water Source:<br>Ground-water <input type="checkbox"/> Tap Water <input type="checkbox"/> | Water Treatment Capacity m <sup>3</sup> | Backwash Time min         |  |  |
| Brine & Slow Rinse Time min                                                               | Brine Refill Time min                   | Fast Rinse Time min       |  |  |
| Problem Description                                                                       |                                         |                           |  |  |



**WENZHOU RUNXIN MANUFACTURING MACHINE CO.,LTD**

ADD: Jinger Road, Shatou Group, Linjiang, Lucheng District, Wenzhou, Zhejiang, China

Tel: +86-577-88635628 88630038 Fax: +86-0577-88633258

Http://www.run-xin.com Email:sales@run-xin.com