

## LENNTECH

info@lenntech.com Tel. +31-152-610-900 www.lenntech.com Fax. +31-152-616-289

## FILMTEC<sup>™</sup> TW30HP-4611 Membranes

FILMTEC 4.6" Tapwater RO Elements

## **Features**

FILMTEC<sup>™</sup> 4.6-inch diameter RO elements offer the highest quality water for hospitals, dialysis clinics and other medical applications, using the high performance TW30HP membrane which provides superior permeate flow and salt rejection. These elements are made with the same high guality materials of construction as our larger FILMTEC elements used in municipal and industrial systems. For added convenience during shipping, storage and loading, these elements are available as either wet or dry products.

## **Product Specifications**


	Product Water Flow Rate			Applied Pressure	Stabilized Salt
Product	(gpd)	(m³/d)	(l/h)	psig (bar)	Rejection Cl <sup>.</sup> (%)
TW30HP-4611	1,200	4.54	189	225 (15.5)	99.0
TW30HP-4619	1,450	5.49	229	225 (15.5)	99.0
TW30HP-4641	5,200	19.68	820	225 (15.5)	99.0
	0,200	17100	020	220 (1010)	,,,,,,

1. Permeate flow and salt rejection based on the following test conditions: 2,000 ppm NaCl, pressure specified above, 77°F (25°C), pH 8 and the following recovery rates; TW30HP--4611 - 5%, TW30HP-4619 - 8%, TW30HP-4641 - 15%.

2. Minimum salt rejection for individual element is 98.0%.

3. Flow rates for individual elements may vary +/-20%.

4. For the purpose of improvement, specifications may be updated periodically.

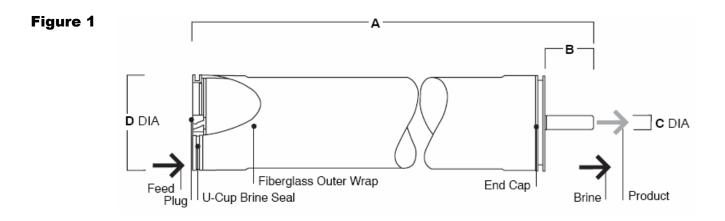

	Maximum Feed	Dimensions – Inc	Dimensions – Inches (mm)			
Product	Flow Rate, gpm (m <sup>3</sup> h)	Α	В	С	D	
TW30HP-4611	18 (4.1)	11.32 (287.53)		0.75 (19)	4.61 (117)	
TW30HP-4619	18 (4.1)	19.20 (487.68)	_	0.75 (19)	4.61 (117)	
TW30HP-4641	18 (4.1)	41.31 (1,049)	2.19 (56)	0.75 (19)	4.61 (117)	
1. Refer to ROSA for m	ultiple-element systems using the TW30HP	-4641.			1 inch = 25.4 mm	

Refer to ROSA for multiple-element systems using the TW30HP-4641.

2. Elements fit nominal 4.6-inch I.D. pressure vessels.

<ul> <li>Membrane Type</li> <li>Maximum Operating Temperature</li> <li>Maximum Operating Pressure</li> <li>Maximum Pressure Drop</li> <li>pH Range, Continuous Operation<sup>a</sup></li> <li>pH Range, Short-Term Cleaning<sup>b</sup></li> <li>Maximum Operating Temperature</li> <li>Maximum Feed Silt Density Index</li> <li>Free Chlorine Tolerance<sup>c</sup></li> </ul>	Polyamide Thin-Film Composite 113°F (45°C) 600 psi (4.1 MPa) 15 psi (1.0 bar) 2 - 11 1 - 13 113°F (45°C) SDI 5 < 0.1 ppm
---	--

<sup>a</sup> Maximum temperature for continuous operation above pH 10 is 95°F (35°C)

<sup>b</sup> Refer to cleaning guidelines in specification sheet 609-23010.

<sup>c</sup> Under certain conditions, the presence of free chlorine and other oxidizing agents will cause premature membrane failure. Since oxidation damage is not covered under warranty, FilmTec recommends removing residual free chlorine by pretreatment prior to membrane exposure. Please refer to technical bulletin 609-22010 for more information.

- Important Operating Information
- 1. Keep elements moist at all times after initial wetting.
- 2. If operating specifications given in this Product Information bulletin are not strictly followed, the limited warranty will be null and void.
- 3. Permeate obtained from first hour of operation should be discarded.
- To prevent biological growth during storage, shipping or system shutdowns it is recommended that FILMTEC<sup>™</sup> elements be immersed in a protective solution. The standard storage solution contains 1.5 percent (by weight) sodium metabisulfite (food grade).
- 5. Elements must be in use for at least six hours before formaldehyde is used as a biocide. If the elements are exposed to formaldehyde before being in use for this period of time, a loss in flux may result.
- 6. The membrane shows some resistance to short-term attack by chlorine (hypochlorite). Continuous exposure, however, may damage the membrane and should be avoided.
- 7. The customer if fully responsible for the effects of incompatible chemicals on elements. Their use will void the element limited warranty.

Notice: The use of this product in and of itself does not necessarily guarantee the removal of cysts and pathogens from water. Effective cyst and pathogen reduction is dependent on the complete system design and on the operation and maintenance of the system.

Notice: No freedom from any patent owned by Seller or others is to be inferred. Because use conditions and applicable laws may differ from one location to another and may change with time, Customer is responsible for determining whether products and the information in this document are appropriate for Customer's use and for ensuring that Customer's workplace and disposal practices are in compliance with applicable laws and other governmental enactments. Seller assumes no obligation or liability for the information in this document. NO WARRANTIES ARE GIVEN; ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED.



info@lenntech.com Tel. +31-152-610-900 www.lenntech.com Fax. +31-152-616-289

LENNTECH